


Assembly instructions


⚠ Notice : The accessories are in a zippered pocket at the bottom of the sofa.

⚠ Notice : Firmly secure all bolts, screws and nuts before use and reconfirm every 90 days. Do not overtighten screws.


acanva®
SKU: AZY912

Single Box Parts List	
	x6
	x1

Please follow the steps below to assemble

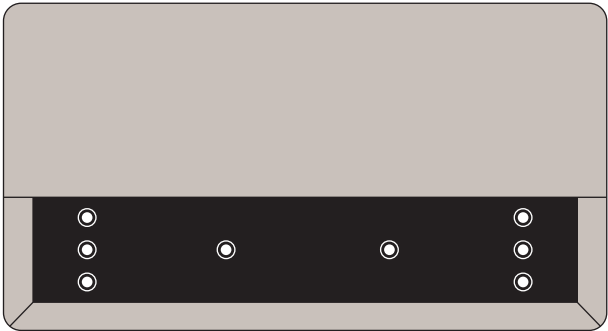

Universal left and right,only need to change the screw hole position.

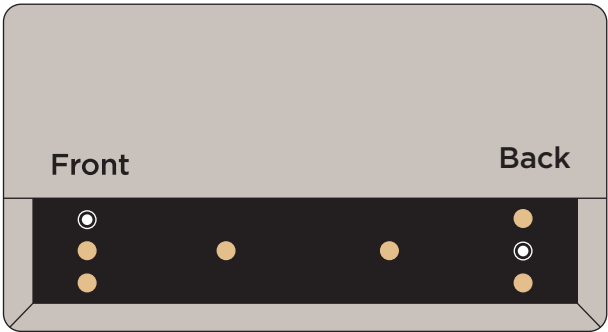

Left armrest
Screw into the yellow hole as shown above

Right armrest
Screw into the green hole as shown above

⚠ Notice: The sofa cover is secured with velcro, removable washable, be careful when removing the sofa cover.Before cleaning, flip the black cloth around the velcro on top of the velcro. This prevents the velcro from scratching the sofa cover during cleaning.

Assembly instructions


⚠ **Notice :** The accessories are in a zippered pocket at the bottom of the sofa.

⚠ **Notice :** Firmly secure all bolts, screws and nuts before use and reconfirm every 90 days. Do not overtighten screws.

acanova®

SKU: AZY912


1

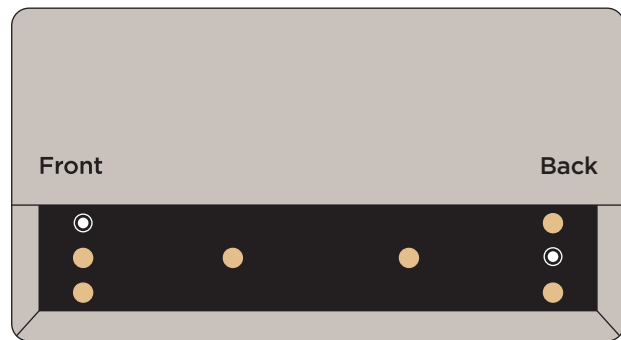

Screws
quantity:6


Screw the screws into the holes of the armrest first

2

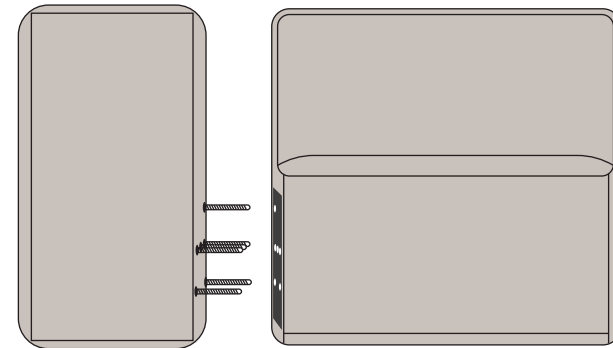


Then thread the screws through the corresponding holes in the sofa section

3

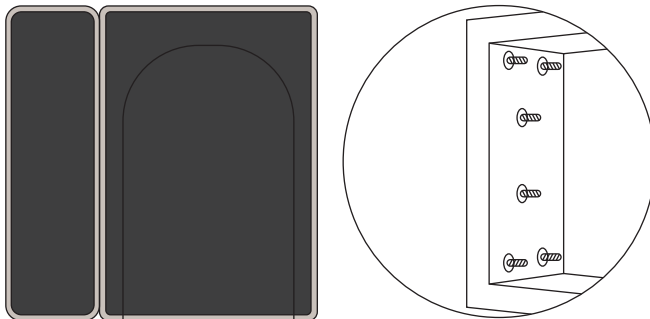

Open the zipper and use tools to tighten the screws from the bottom of the sofa.

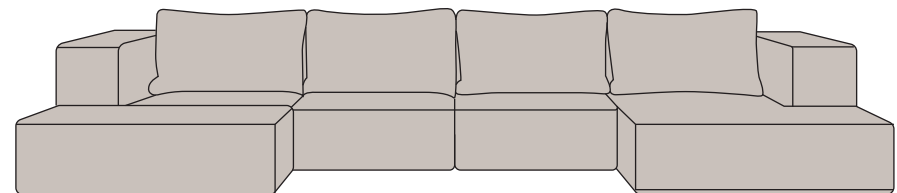

Complete installation