




# Assembly Instructions

Notice : Do not tighten the screws too much during installation. After all screws are installed, then tighten all bolts, screws, and nuts, and recheck every 90 days. Do not overtighten.


acanva®

SKU: ATH750-BG1


| Part Name/Qty | |
|---|---|
|  A | x1 |
|  B | x1 |
|  C | x1 |
|  D | x1 |
|  E | x1 |
|  F | x1 |
|  75mm G | x2 |
|  65mm H | x2 |
|  35mm I | x10 |
|  J | x14 |
|  K | x1 |
|  L | x14 |

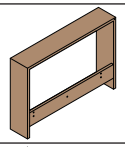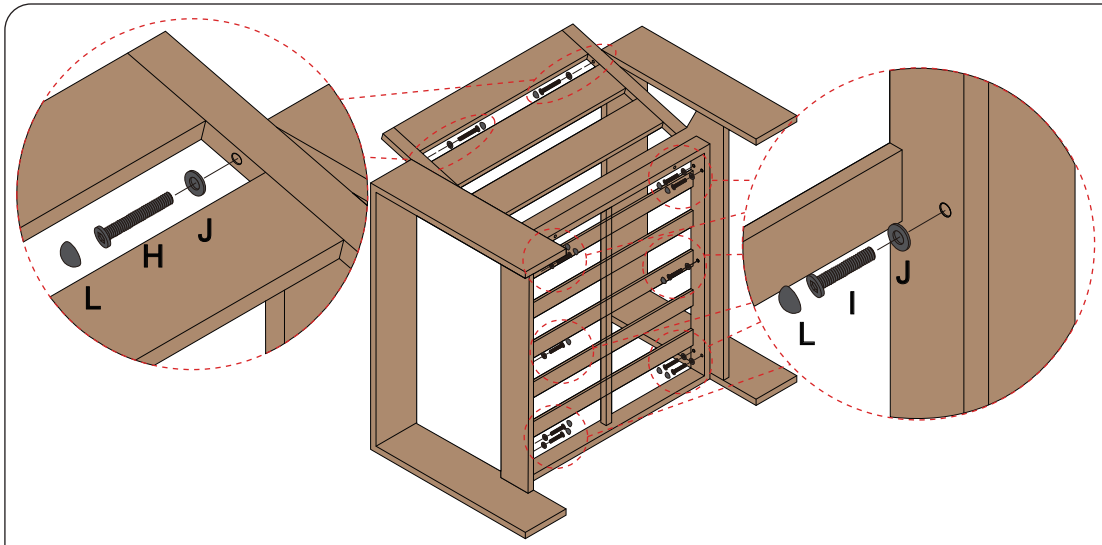


Attach the armrests to the sofa frame by inserting the bolts through the holes in the frame.

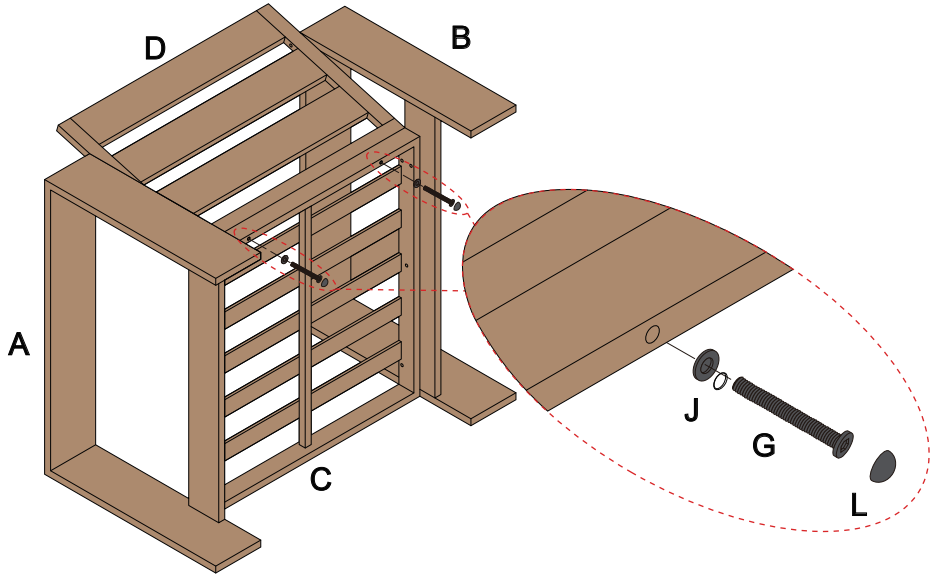


Attach the backrest to the sofa frame by inserting the bolts through the holes in the frame.

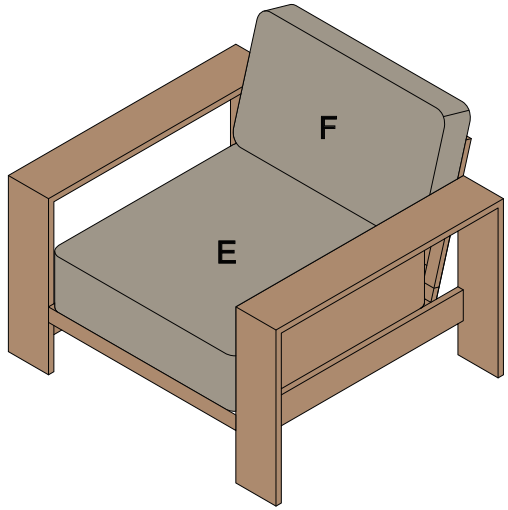







Place the back cushion and seat cushion onto the sofa frame.Installation complete.


# Assembly Instructions

Notice : Do not tighten the screws too much during installation. After all screws are installed, then tighten all bolts, screws, and nuts, and recheck every 90 days. Do not overtighten.


acanva®

SKU: ATH750-BG3


| Part Name/Qty | | |
|---|---|---|
|  | A | x1 |
|  | B | x1 |
|  | C | x1 |
|  | D | x1 |
|  | E | x1 |
|  | F | x3 |
|  | G | x3 |
|  75mm | H | x4 |
|  65mm | I | x2 |
|  35mm | J | x10 |
|  15mm | K | x2 |
|  | L | x18 |
|  | M | x1 |
|  | N | x18 |

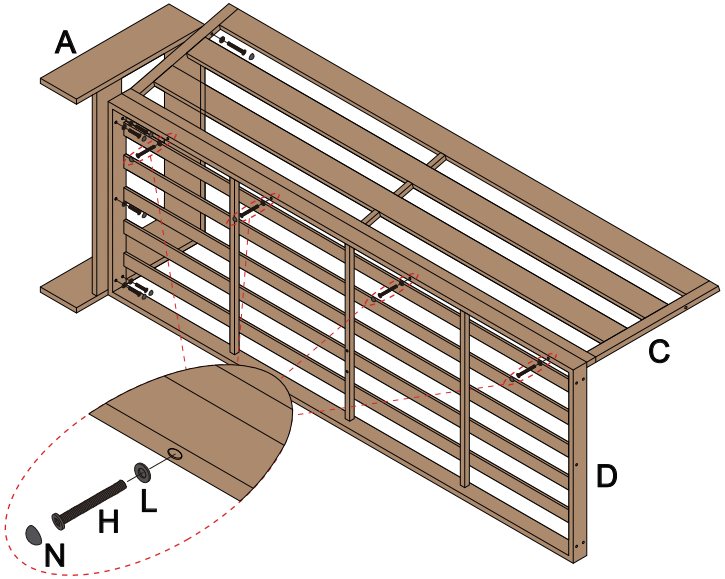



Attach the backrest to the sofa frame by inserting the bolts through the holes in the frame.

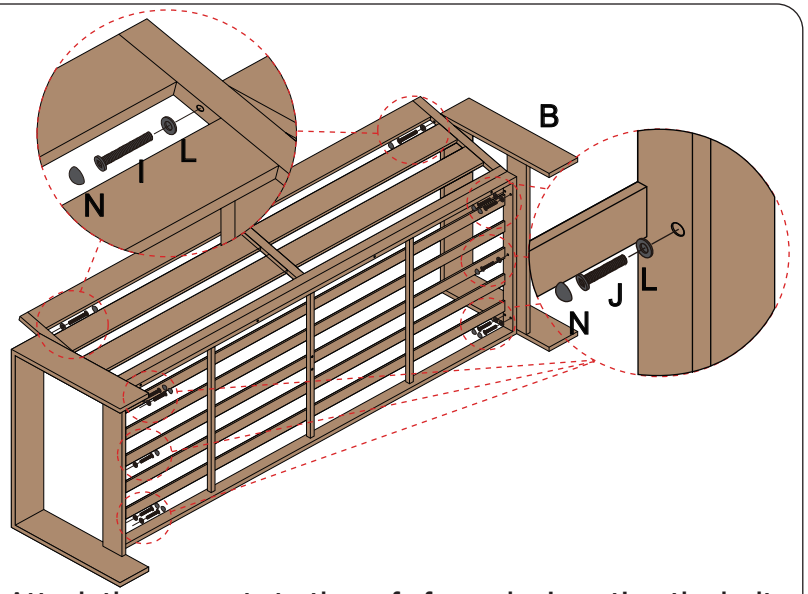


Attach the armrests to the sofa frame by inserting the bolts through the holes in the frame.

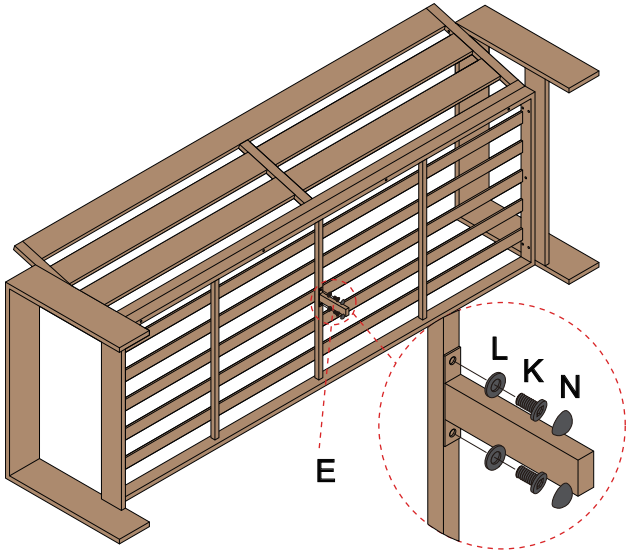


Insert the screws through the sofa legs and frame holes,then tighten the nuts to securely fasten them.

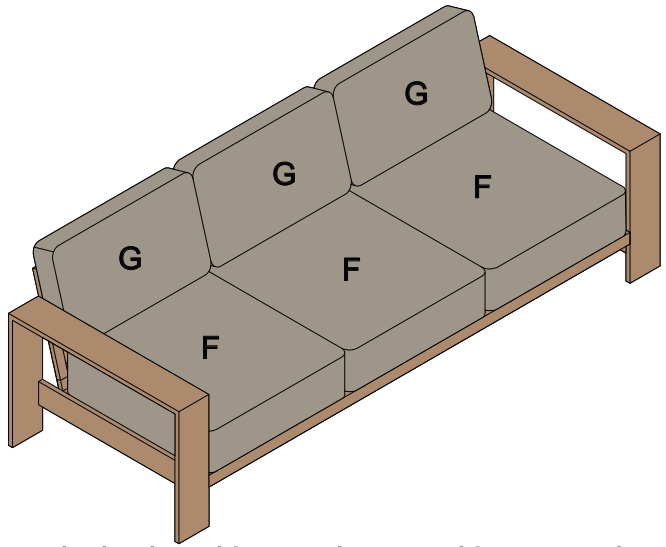







Place the back cushions and seat cushions onto the sofa frame. Installation complete.


# Assembly Instructions

Notice : Firmly secure all bolts, screws, and nuts before use, and recheck them every 90 days. Do not overtighten the screws.and recheck every 90 days. Do not overtighten.


acanva®

SKU: ATH752-BGS(Double sofa-single armrest)


| Part Name/Qty | | |
|---|---|---|
|  | A | x1 |
|  | B | x1 |
|  | C | x1 |
|  | D | x1 |
|  | E | x2 |
|  | F | x2 |
|  75mm | G | x3 |
|  65mm | H | x1 |
|  35mm | I | x10 |
|  25mm | J | x1 |
|  | K | x15 |
|  | L | x1 |
|  | M | x15 |

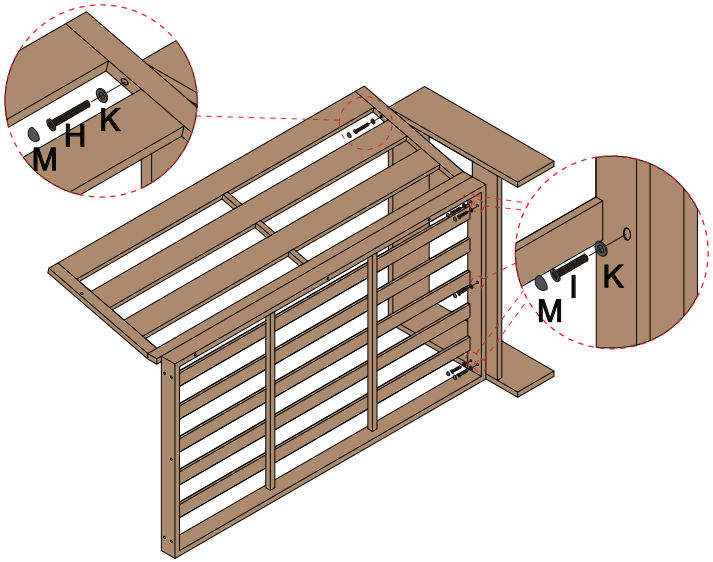



Attach the armrests to the sofa frame by inserting the bolts through the holes in the frame.

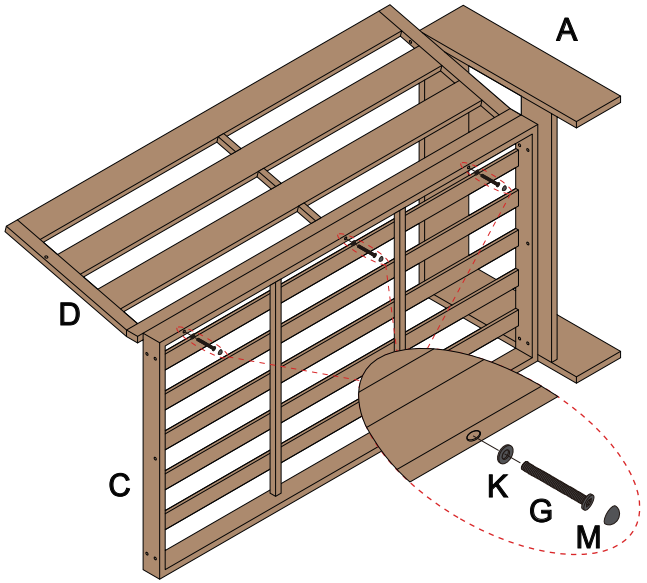


Attach the backrest to the sofa frame by inserting the bolts through the holes in the frame.

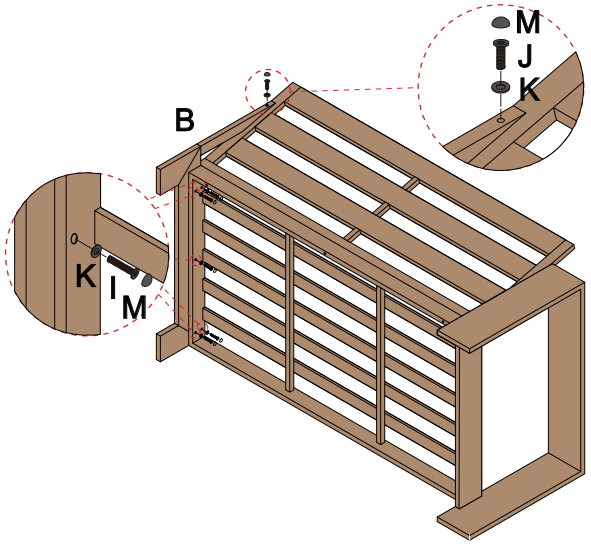


Attach the armrests to the sofa frame by inserting the bolts through the holes in the frame.

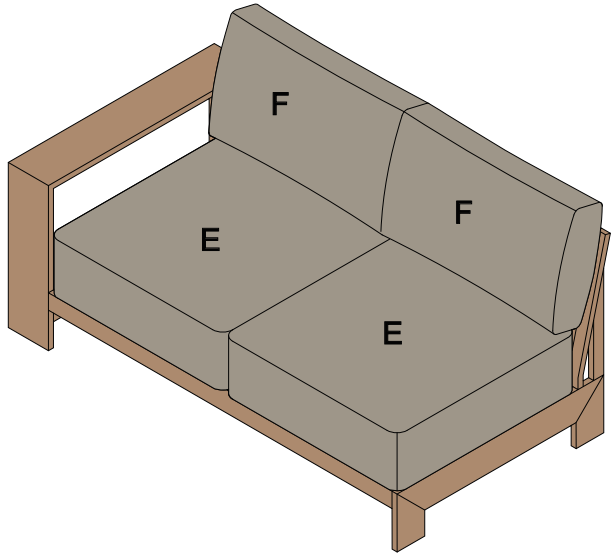






Place the back cushions and seat cushions onto the sofa frame.Installation complete.

# Assembly Instructions


Notice : Do not tighten the screws too much during installation. After all screws are installed, then tighten all bolts, screws, and nuts, and recheck every 90 days. Do not overtighten.

acanva®


SKU: ATH752-BGS(Tri-seater sofa with corner)

| Part Name/Qty | | |
|---|---|---|
|  | A | x1 |
|  | B | x1 |
|  | C | x1 |
|  | D | x1 |
|  | E | x1 |
|  | F | x2 |
|  | G | x2 |
|  | H | x1 |
|  | I | x1 |
|  | J | x1 |
|  | K | x2 |
| 75mm | L | x4 |
| 65mm | M | x2 |
| 35mm | N | x10 |
| 15mm | O | x2 |
|  | P | x18 |
|  | Q | x1 |
|  | R | x18 |


Attach the armrests to the sofa frame by inserting the bolts through the holes in the frame

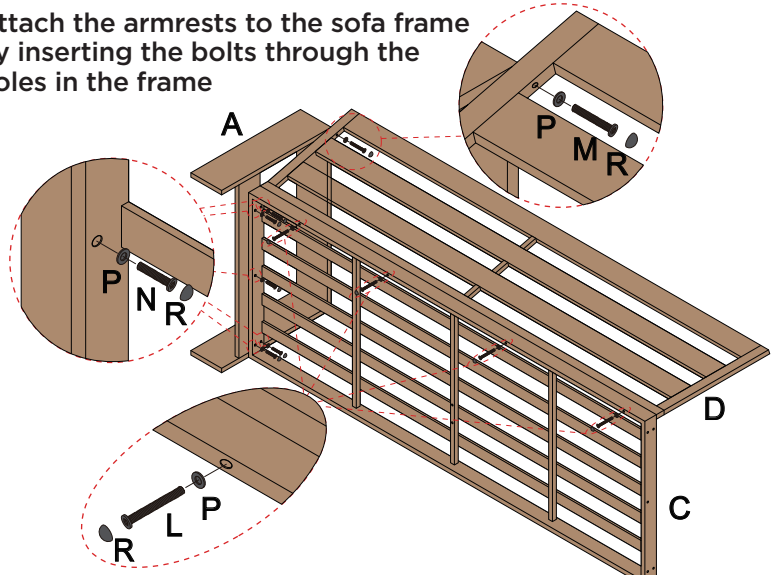



Attach the backrest to the sofa frame by inserting the bolts through the holes in the frame

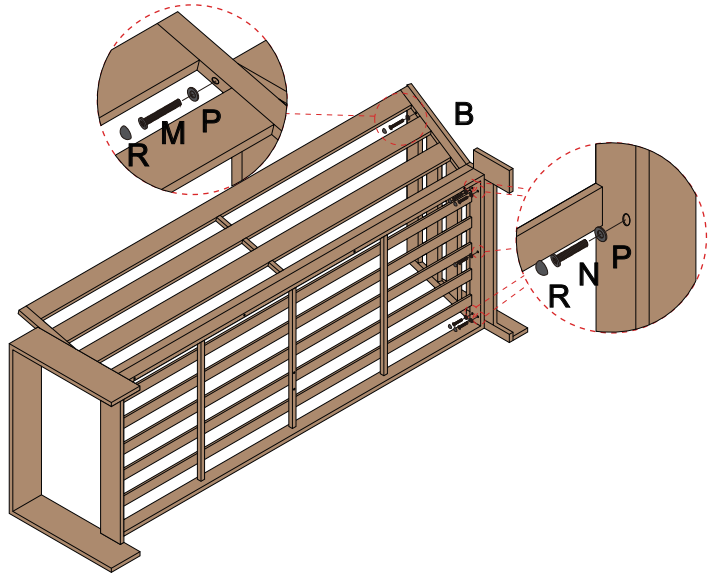


Attach the armrests to the sofa frame by inserting the bolts through the holes in the frame

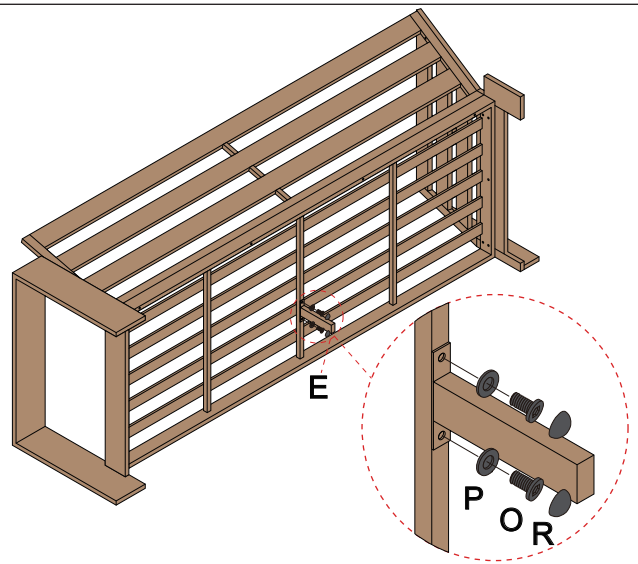


Insert the screws through the sofa legs and frame holes,then tighten the nuts to securely fasten them.

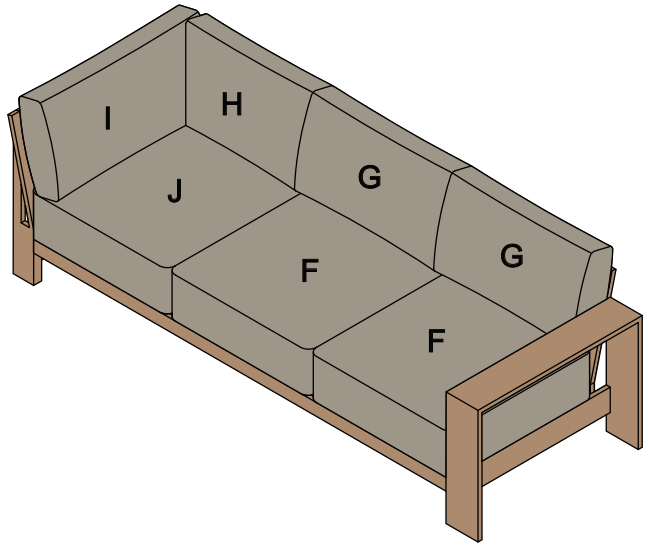


Place the back cushions and seat cushions onto the sofa frame.Installation complete


# Assembly Instructions


Notice : Do not tighten the screws too much during installation. After all screws are installed, then tighten all bolts, screws, and nuts, and recheck every 90 days. Do not overtighten.

acanva®

SKU: ATH752-BGS(Sectional)

The L-shaped corner position is fixed with cable ties

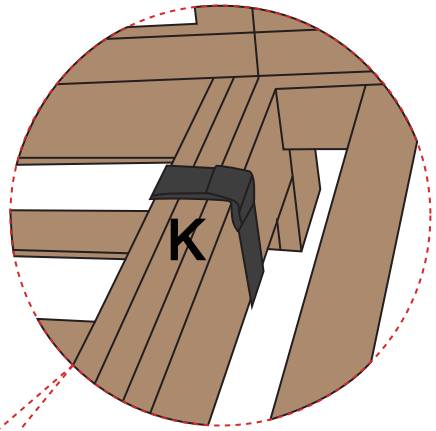


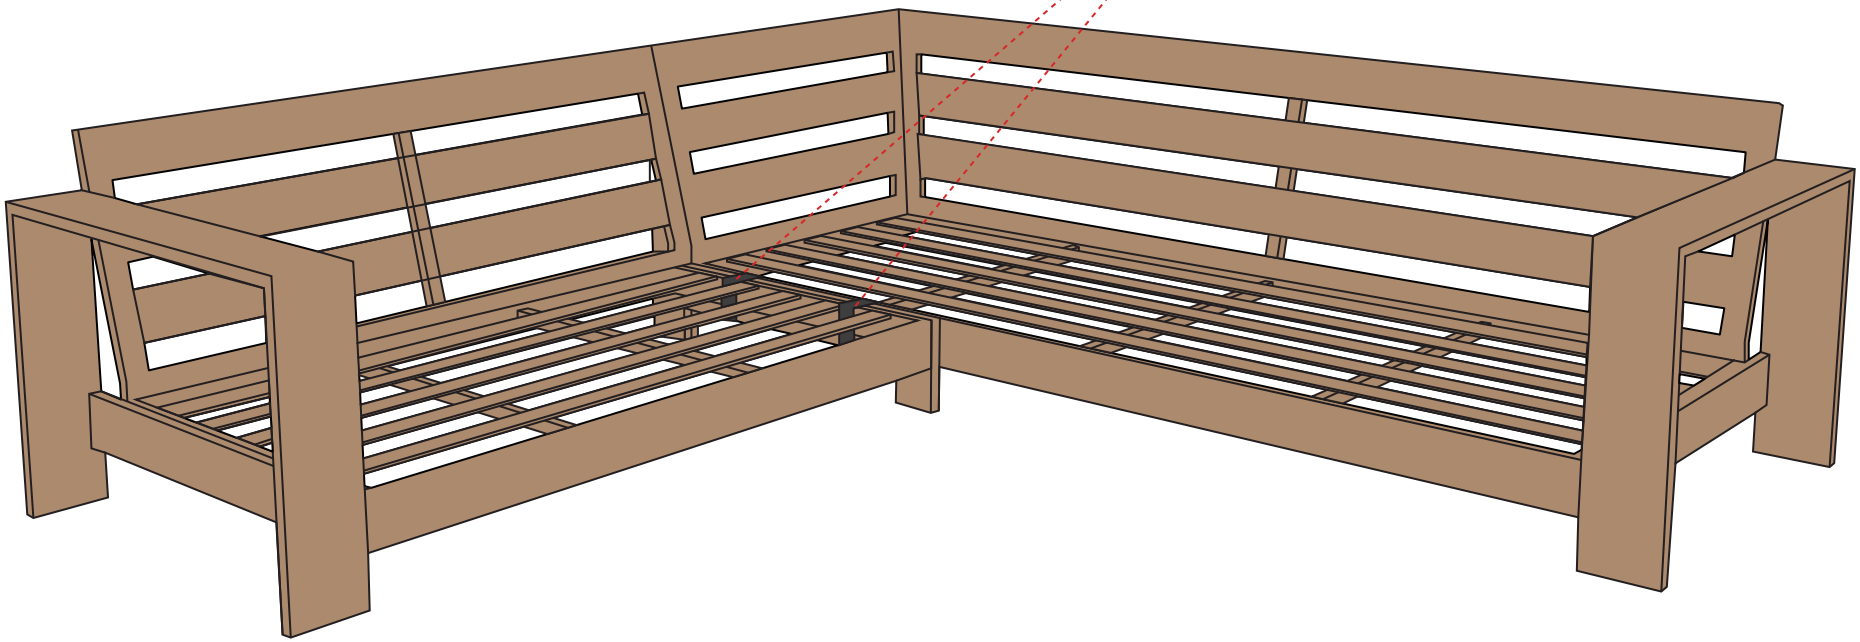



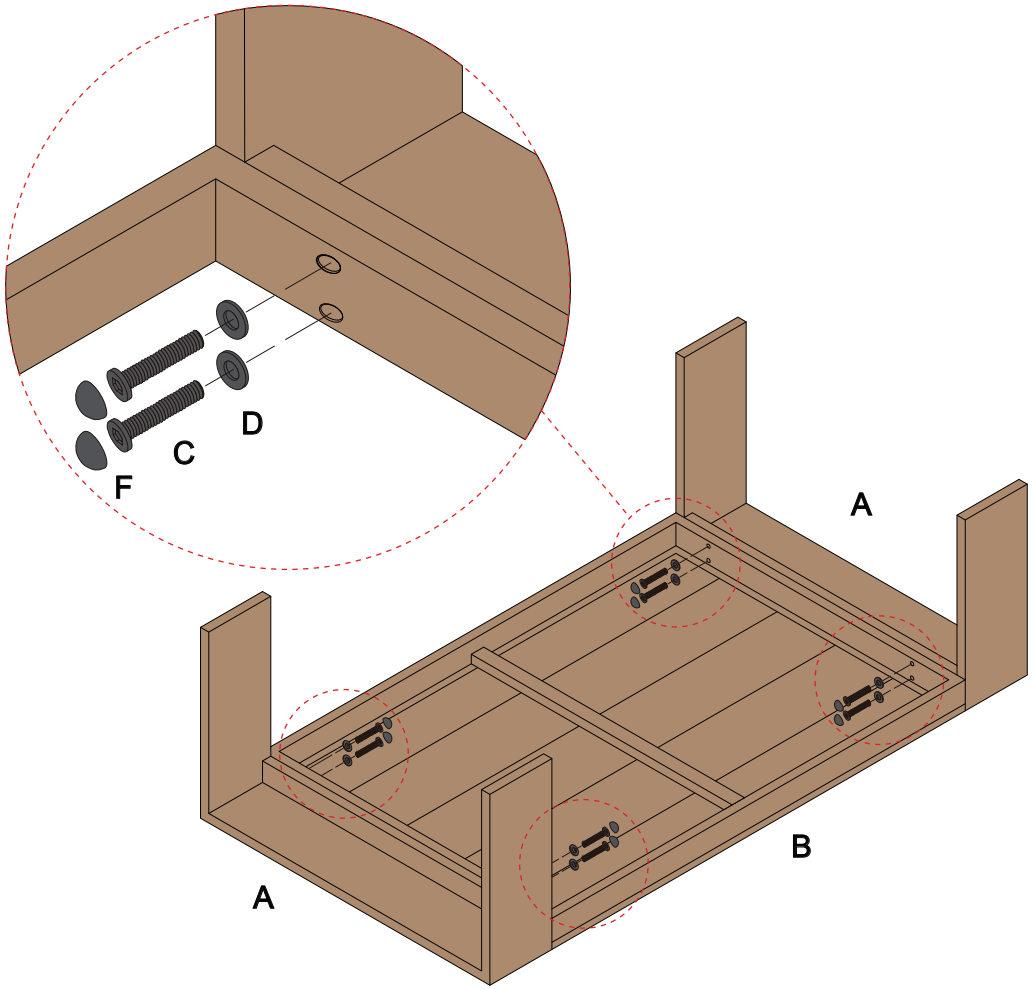
# Assembly Instructions

Notice : Do not tighten the screws too much during installation. After all screws are installed, then tighten all bolts, screws, and nuts, and recheck every 90 days. Do not overtighten.


acanva®

SKU: ATH751-OACT
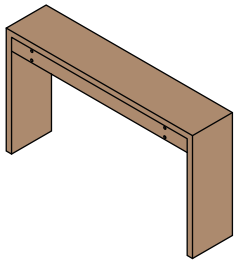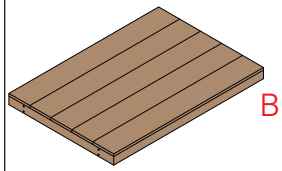
| Part Name/Qty | |
|---|---|
|  A | x2 |
|  B | x1 |
|  35mm C | x8 |
|  D | x8 |
|  E | x2 |
|  F | x8 |




Attach the table legs to the tabletop by inserting bolts into the holes in the frame.

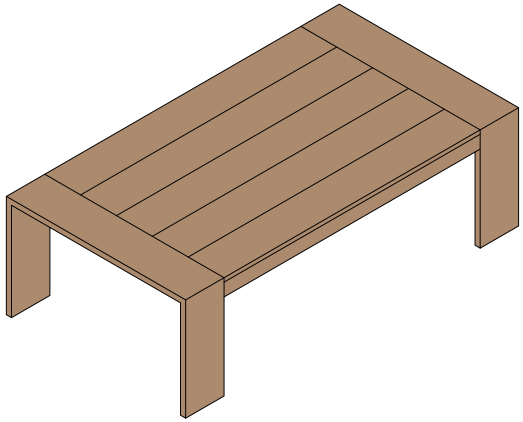

Installation complete.