Assembly instructions


ⓘ Notice : Accessories are stored in a pocket with the rocking chair.

ⓘ Notice : Secure all bolts, screws, and nuts before use. Recheck every 90 days. Do not overtighten.


acanva®

SKU: AZH621

Parts List

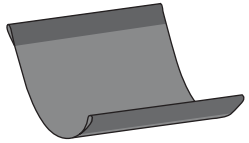
	x1
	x3
	x2
	x1
A  M6*16	x20
B  Flat Washer	x20
C  Allen Wrench	x1

①

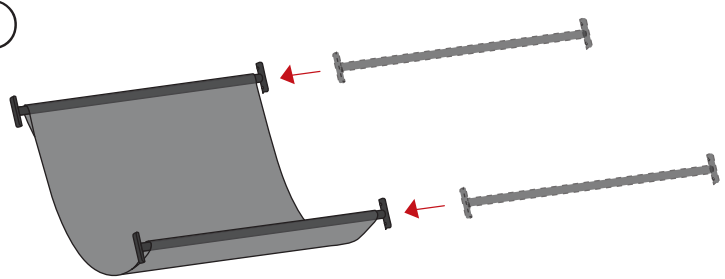


Insert the metal rods through the fabric sling as shown. Ensure both ends are fully seated and aligned before proceeding.

②

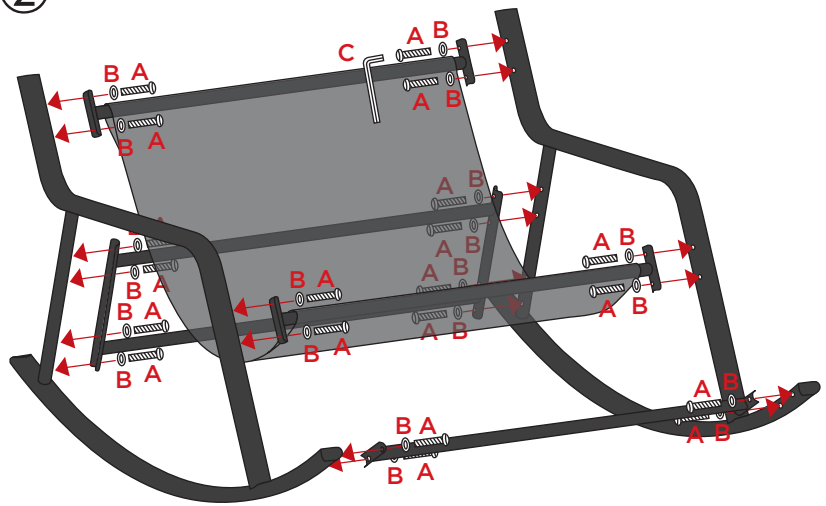

Align the holes on the metal parts with the corresponding holes on the left and right frames as shown. Ensure each hole is properly aligned before inserting the screws. For each screw (A), place a flat washer (B) before insertion. Connect all metal frame parts using screws (A) and washers (B) in the indicated positions. Use the Allen wrench (C) to tighten the screws.

③

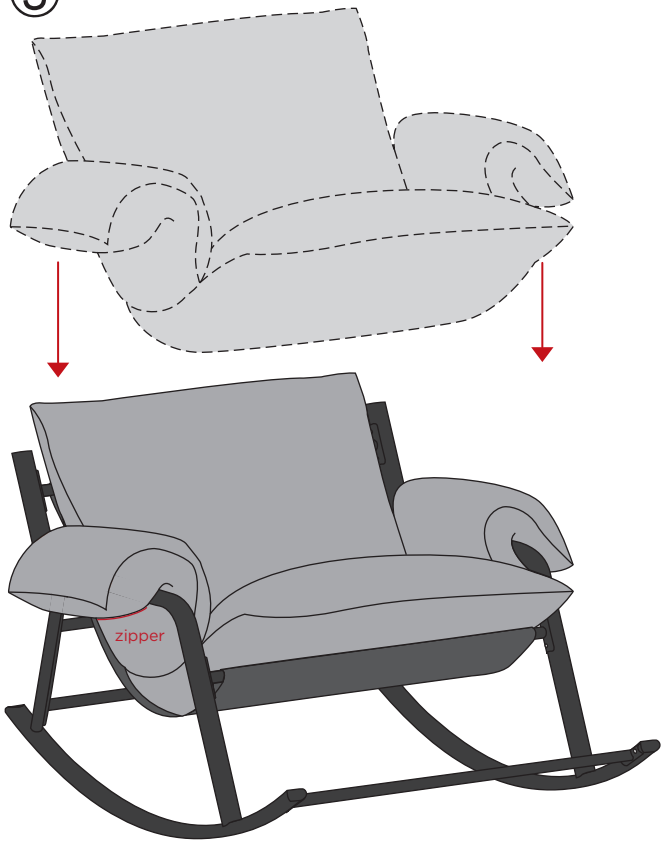

Place the integrated cushion onto the assembled metal frame. Wrap the left and right armrest covers over the metal armrests and zip them up fully to secure the cushion.

The cushion cover is removable and washable. Simply unzip the seat and armrest covers to remove the inner filling. When reinserting, adjust the filling to all corners for a full and neat fit.