


Assembly instructions


ⓘ **Notice :** Firmly secure all bolts, screws and nuts before use and reconfirm every 90 days. Do not overtighten screws.

Part name/Qty	
	x1
 A 35mm	x4
 B 55mm	x2
 C	x6
 D	x6

Place the back cushion and seat cushion onto the sofa frame.

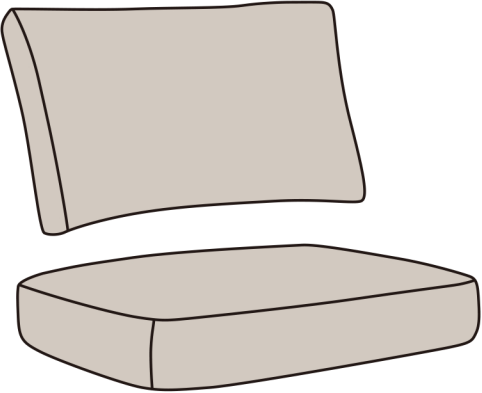


Please first install the screws on the backrest.

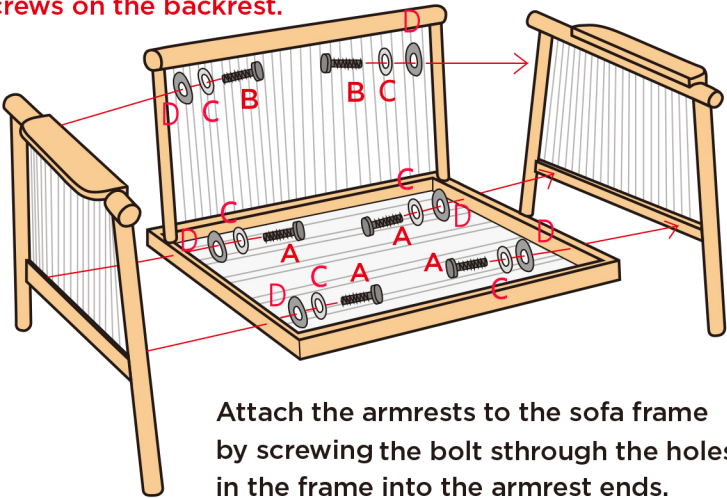

Attach the armrests to the sofa frame by screwing the bolt through the holes in the frame into the armrest ends.

Installation complete

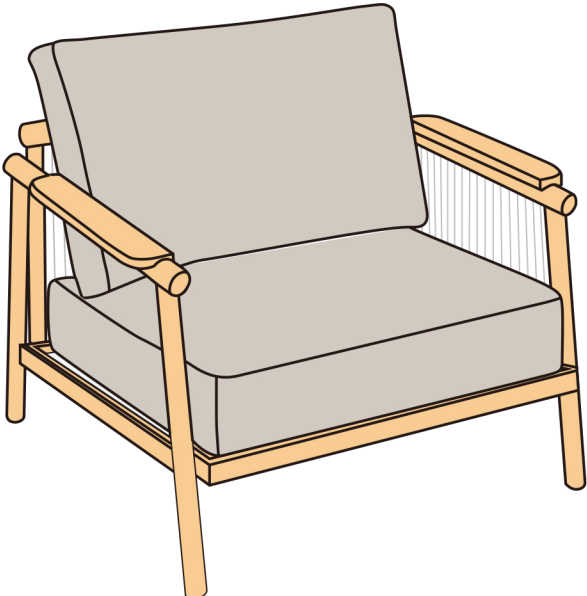





Assembly instructions

acanova®

SKU: AZH602

ⓘ **Notice :** Firmly secure all bolts, screws and nuts before use and reconfirm every 90 days. Do not overtighten screws.

Part name/Qty		
	A	x1
	B	x1
	C	x4
	D	x2
	E	x2
	F	x1
	G	x3
	H	x9
	I	x9

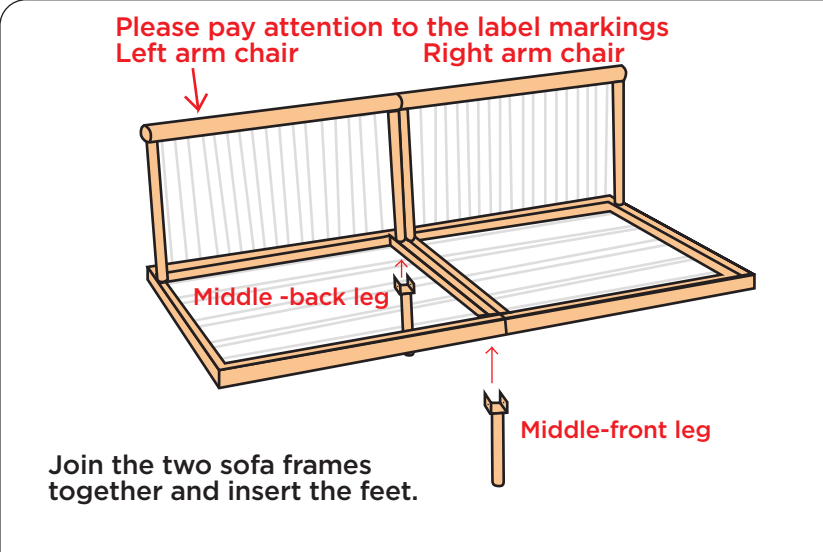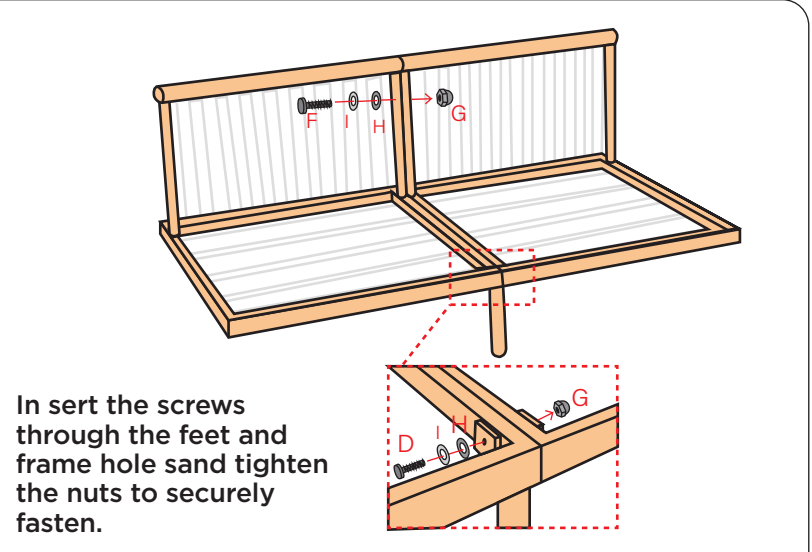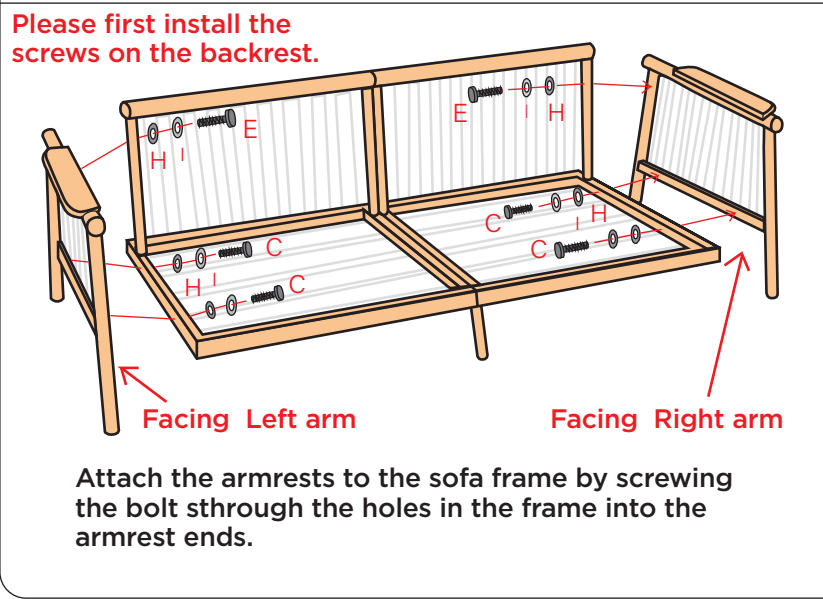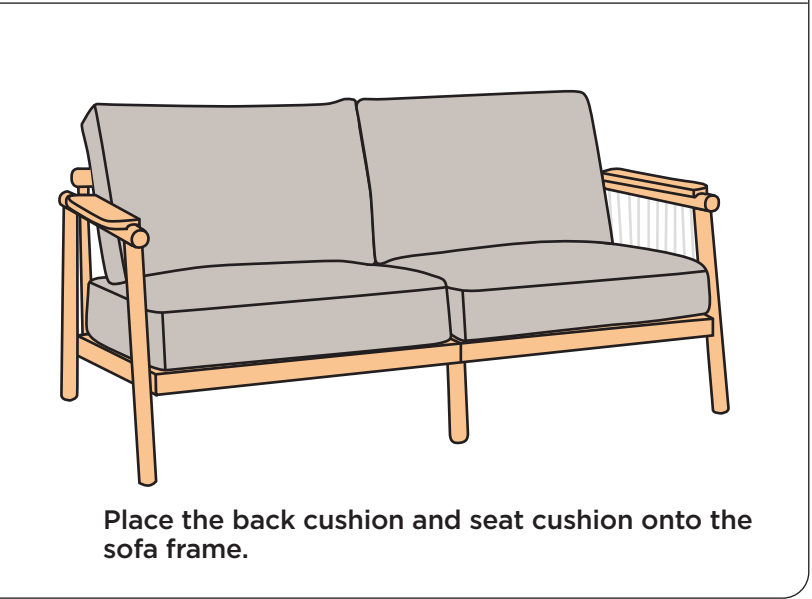

Assembly instructions


acanova®

SKU: AZH602


ⓘ **Notice :** Firmly secure all bolts, screws and nuts before use and reconfirm every 90 days. Do not overtighten screws.

Part name/Qty		
	A	x1
	B	x1
	C	x4
	D	x4
	E	x2
	F	x2
	G	x6
	H	x12
	I	x12


Please pay attention to the label markings
Left arm chair Armless chair Right arm chair

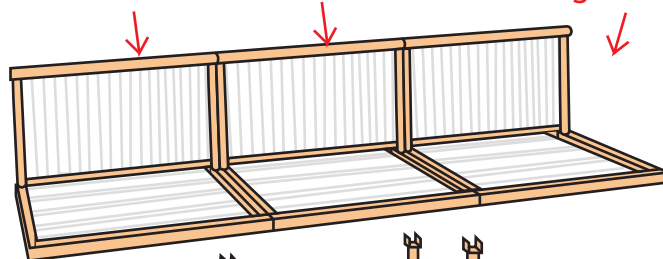


Join the two sofa frames together and insert the feet.

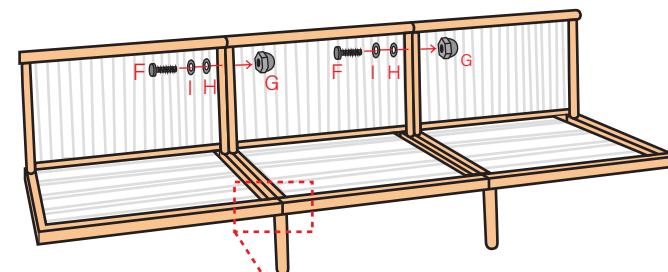


Insert the screws through the feet and frame hole and tighten the nuts to securely fasten.

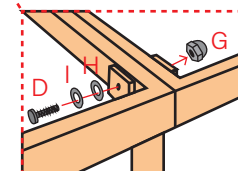

Please first install the screws on the backrest.

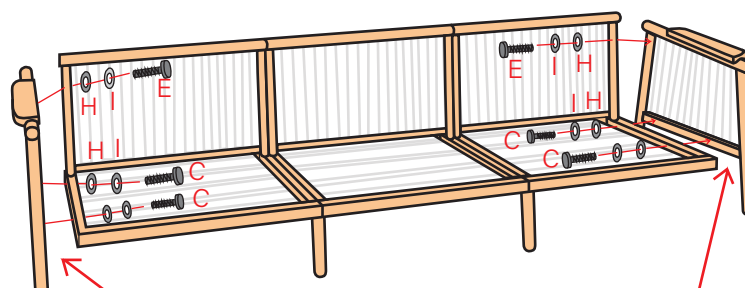

Attach the armrests to the sofa frame by screwing the bolt through the holes in the frame into the armrest ends.

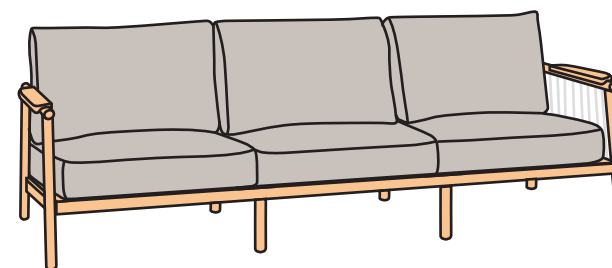

Place the back cushion and seat cushion onto the sofa frame.