Assembly instructions




Care Notice : The fabric is water-resistant, not waterproof. Avoid prolonged exposure to rain and move the lounge chair to a sheltered area during severe weather.

Notice : Make sure all screws are securely tightened before use. Recheck every 90 days. Do not overtighten.


acanva®


SKU: AZH616

Parts List

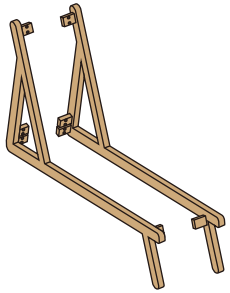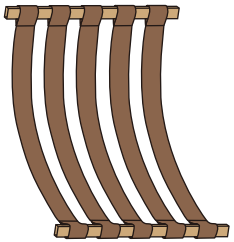 Side Frames (Left & Right)	x1
 Crossbar	x1
 Webbing Support Assembly	x1
A  M6×16mm Screw	x16
B  Flat Washer	x16
C  Allen Wrench	x1


① Assemble the Frame

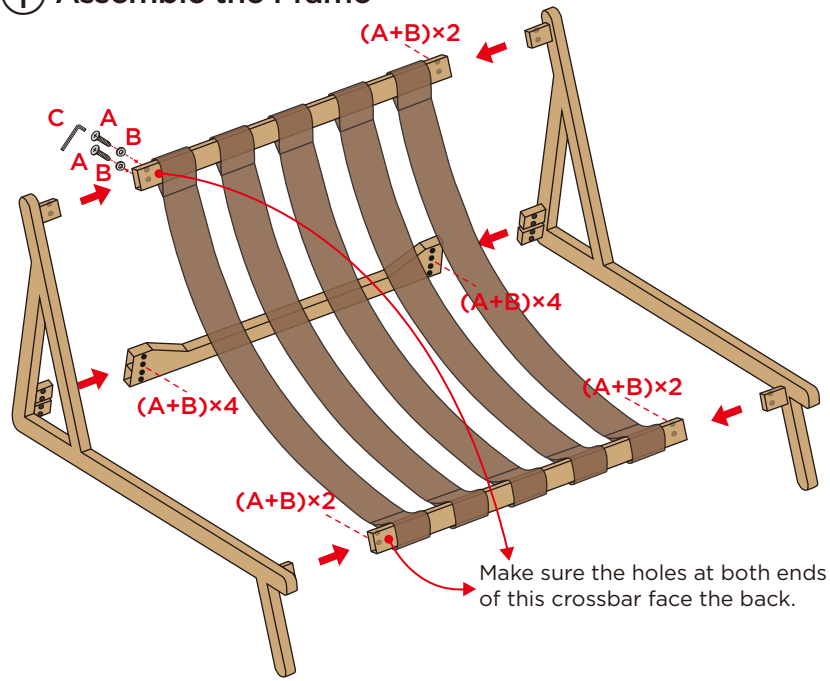

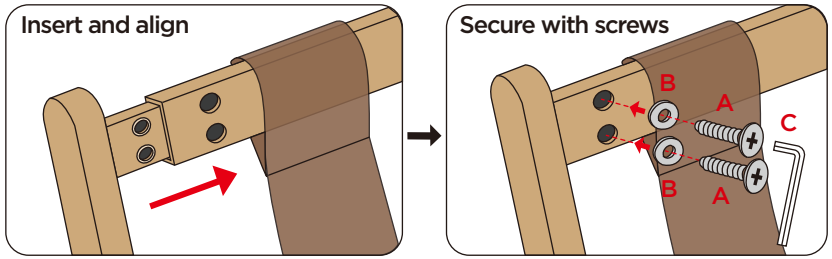

Insert the crossbars into the metal brackets on both side frames as shown. Align the holes, then secure each connection with screws (A) and flat washers (B). Tighten all screws with the Allen wrench (C). Adjust the webbing straps so they are evenly spaced.

② Install the Cushion

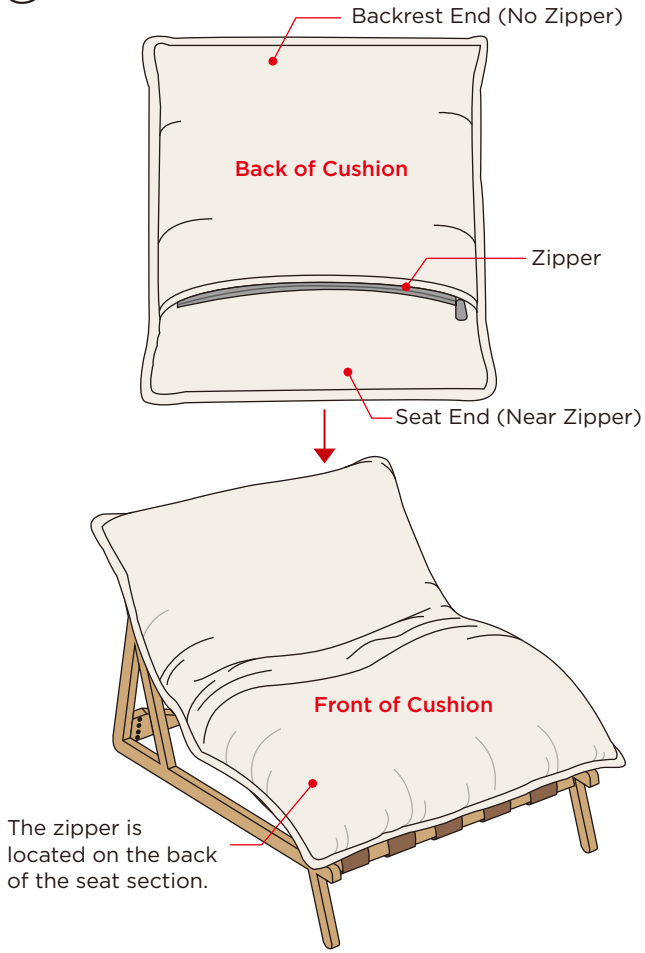

The seat and backrest sections are filled differently. Place the cushion on the frame with the zipper end at the seat and the non-zipper end at the backrest. Adjust the cushion as needed for sitting or reclining.