


Assembly Instructions


⚠ Notice : Accessories are stored in a pocket with the sofa.

⚠ Notice : Secure all bolts, screws, and nuts before use. Recheck every 90 days. Do not overtighten.


acanova®
SKU: AZY939

Parts List		
	Seat Cushion	x1
	Backrest/Armrest	x1
	Back Cushion	x1
	Leg	x4
	T-shaped Leg	x2
A 	M8*50	x4
B 	Flat Washer	x8
C 	Allen Wrench (5mm)	x1
D 	M6*35	x4
E 	Allen Wrench (4mm)	x1

1. Assemble the Backrest of the Armless Chair

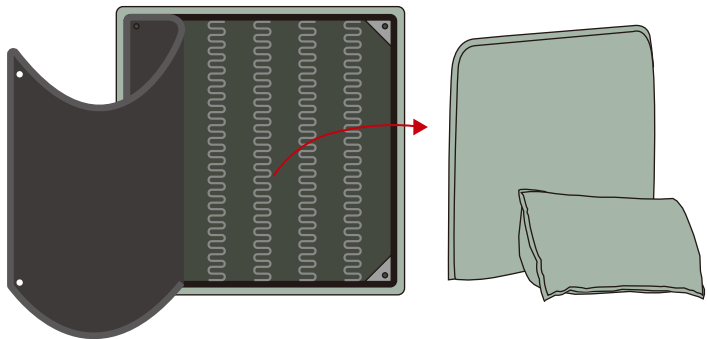


1.1 Open the Velcro cover at the bottom of the sofa. Remove the back cushion and take out the backrest. Gently twist the backrest left and right when removing it to avoid damage.

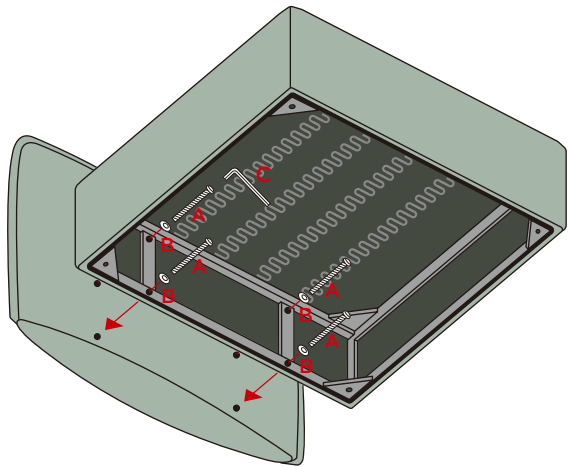


1.2 Align the backrest with the holes on the seat base. Insert and tighten screws into the four holes.

1.3 Reattach the fabric cover along the Velcro.

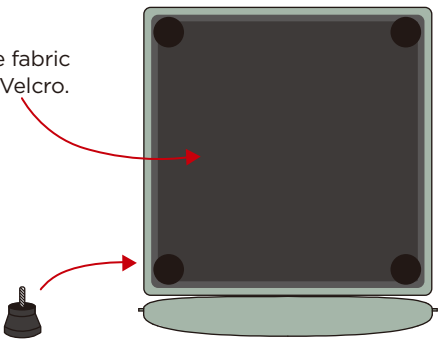

1.4 Attach the sofa legs to the pre-drilled holes at the bottom of the base.

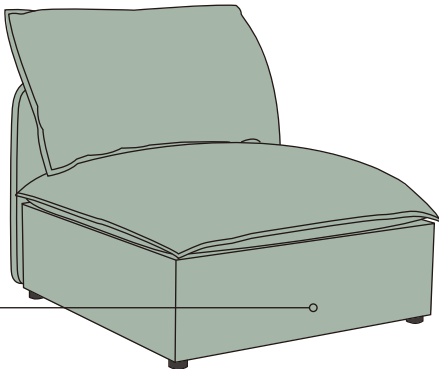

Note: The side faces forward.

Assembly Instructions

⚠ **Notice :** Accessories are stored in a pocket with the sofa.


⚠ **Notice :** Secure all bolts, screws, and nuts before use. Recheck every 90 days. Do not overtighten.

acanova®



SKU: AZY939

2. Assembly of Multi-piece Configuration

Schematic Diagram of Multi-piece Assembly

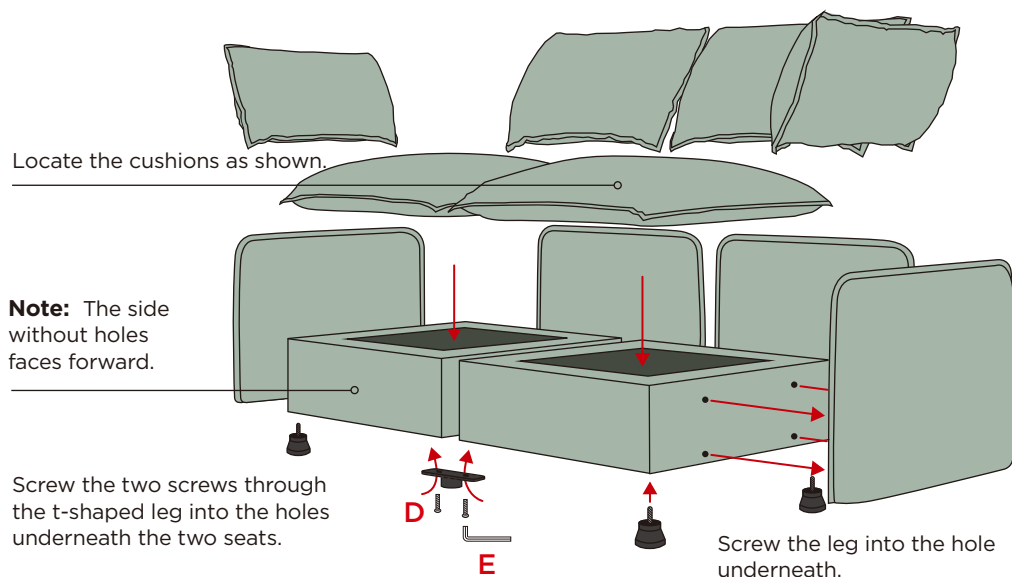

Schematic Diagram of Bottom Metal Legs Installation

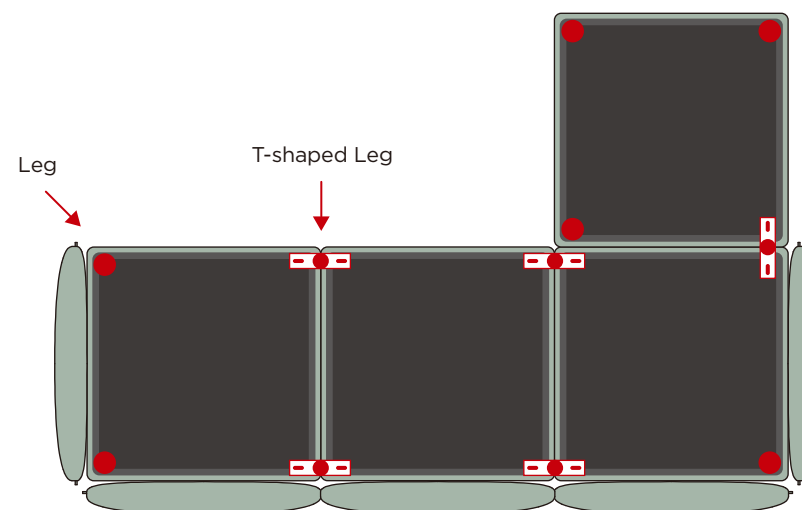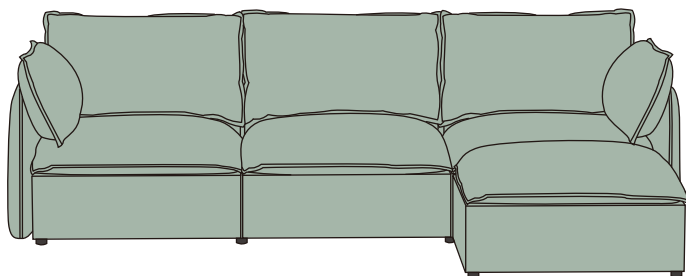


Freely configure the sofa according to this manual.
Additional combinations can also be created as needed.

Assembly Instructions


⚠ Notice : Accessories are stored in a pocket with the sofa.

⚠ Notice : Secure all bolts, screws, and nuts before use. Recheck every 90 days. Do not overtighten.


acanova®
SKU: AZY939

Parts List		
	Seat Cushion	x1
	Backrest/Armrest	x2
	Back Cushion	x1
	Arm Cushion	x1
	Leg	x4
	T-shaped Leg	x2
A 	M8*50	x8
B 	Flat Washer	x12
C 	Allen Wrench (5mm)	x1
D 	M6*30	x4
E 	Allen Wrench (4mm)	x1


1. Assemble the Armrest and Backrest for Single Arm Chair

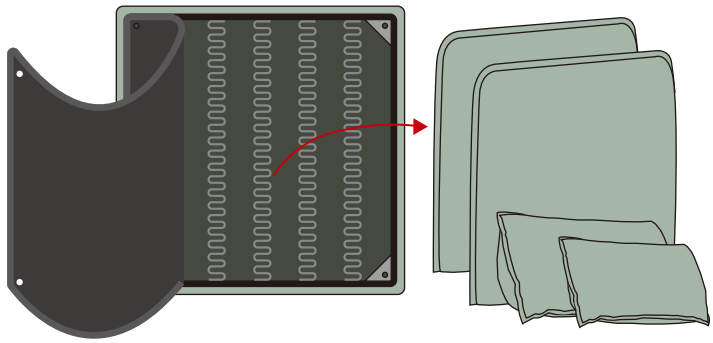

1.1 Open the Velcro cover at the bottom of the sofa. First, remove the compressed back and arm cushions — they will take some time to fully expand. Then take out the backrest and armrest. When removing the backrest and armrest, gently twist them left and right to avoid damage.

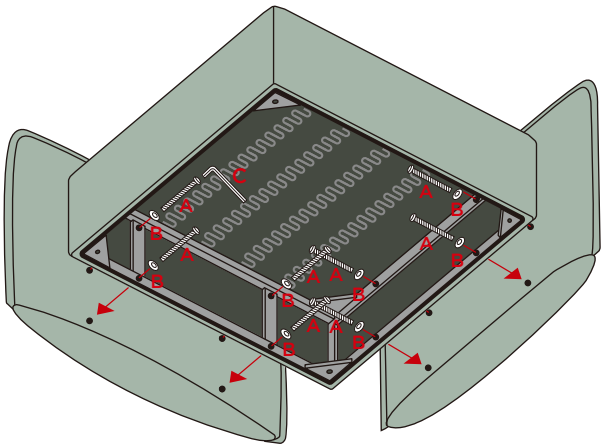

1.2 Align the armrest/backrest with the holes on the seat base. Insert and tighten screws into the total of eight holes—four on each of the two sides.

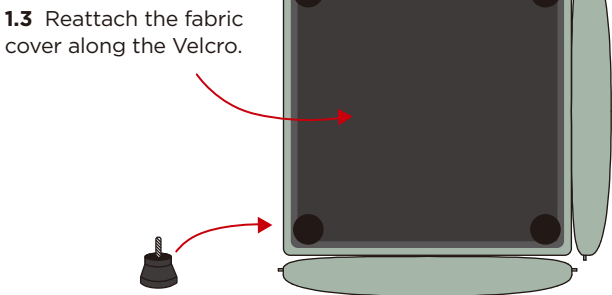


1.3 Reattach the fabric cover along the Velcro.



1.4 Attach the sofa legs to the pre-drilled holes at the bottom of the base.

Note: By swapping the positions of the back cushion and arm cushion, and rotating the seat cushion, you can switch between left-arm and right-arm configurations.

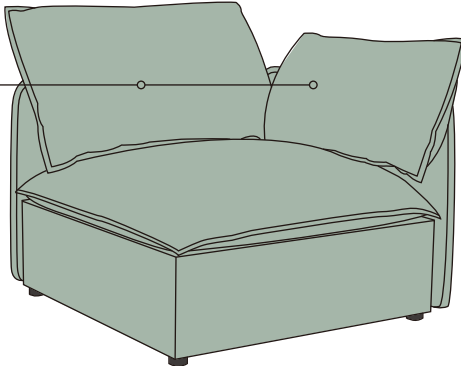

Assembly Instructions

⚠ **Notice :** Accessories are stored in a pocket with the sofa.


⚠ **Notice :** Secure all bolts, screws, and nuts before use. Recheck every 90 days. Do not overtighten.

acanova®



SKU: AZY939

2. Assembly of Multi-piece Configuration

Schematic Diagram of Multi-piece Assembly

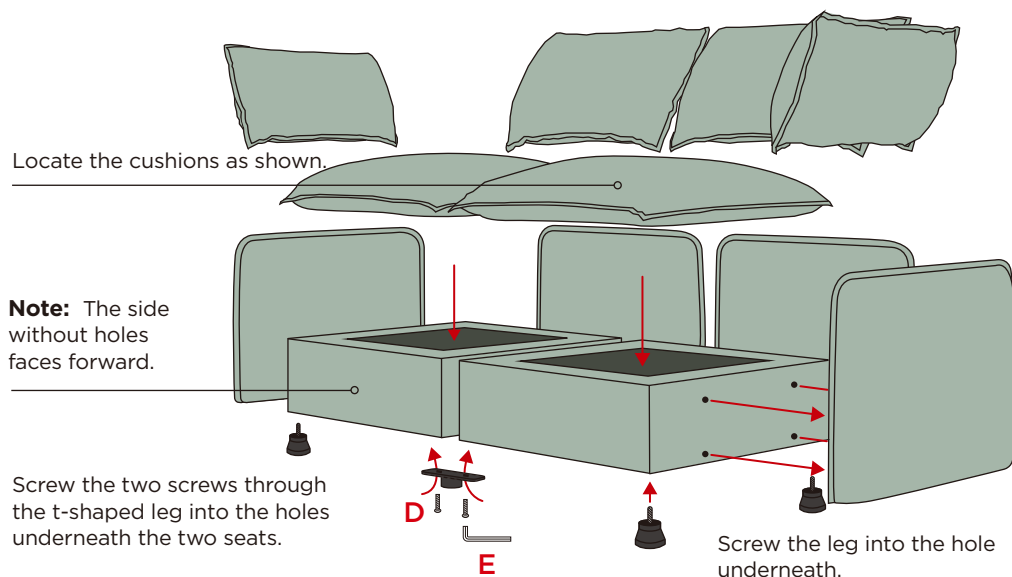

Schematic Diagram of Bottom Metal Legs Installation

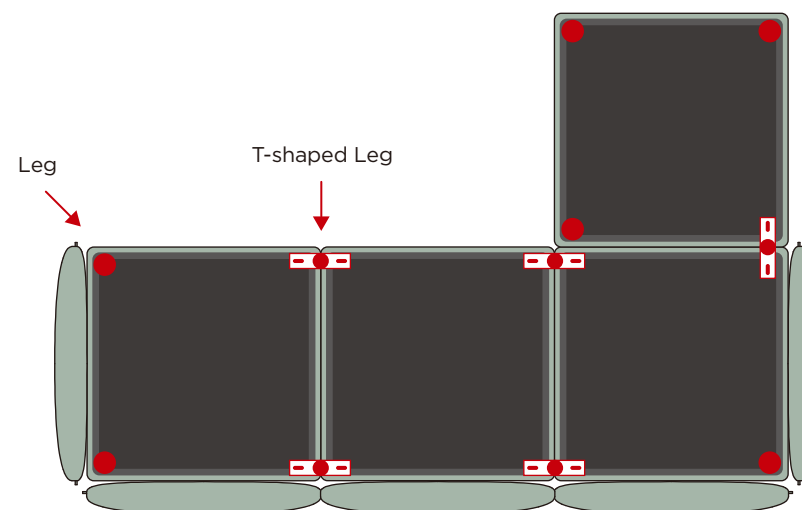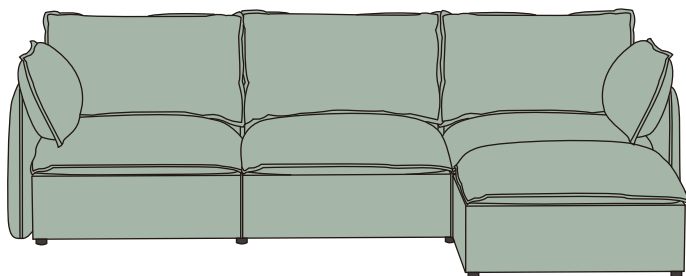

Freely configure the sofa according to this manual.
Additional combinations can also be created as needed.


Assembly Instructions


⚠ Notice : Accessories are stored in a pocket with the sofa.

⚠ Notice : Secure all bolts, screws, and nuts before use. Recheck every 90 days. Do not overtighten.


acanova®

SKU: AZY939


Parts List		
	Seat Cushion	x1
	Backrest/Armrest	x3
	Back Cushion	x1
	Arm Cushion	x2
	Leg	x4
A 	M8*50	x12
B 	Flat Washer	x12
C 	Allen Wrench (5mm)	x1

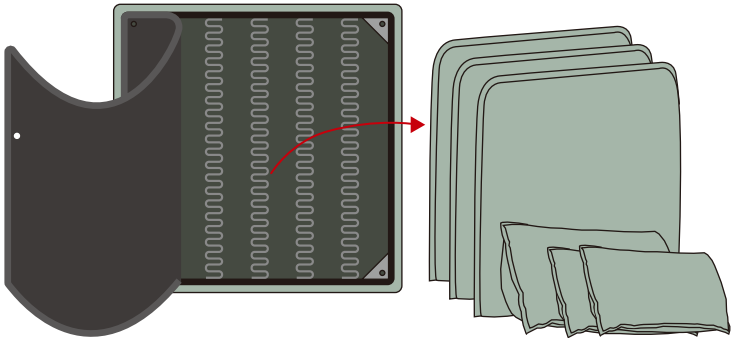

1 Open the Velcro cover on the seat base. First, remove the compressed back and arm cushions — they will take some time to fully expand. Then take out the backrest and armrest. When removing the backrest and armrest, gently twist them left and right to avoid damage.

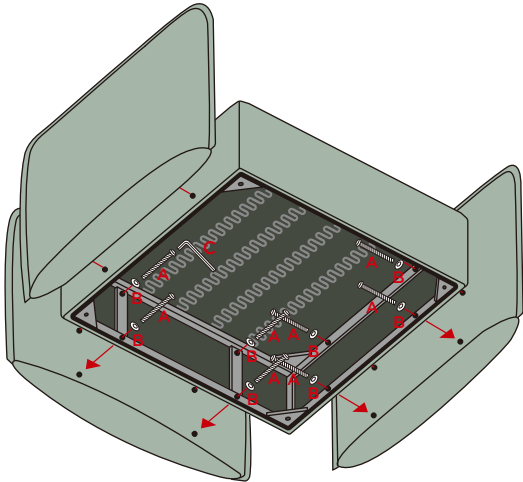


2 Align the armrests and backrest with the holes on the seat base. Insert and tighten screws into the total of twelve holes—four on each of the three sides.

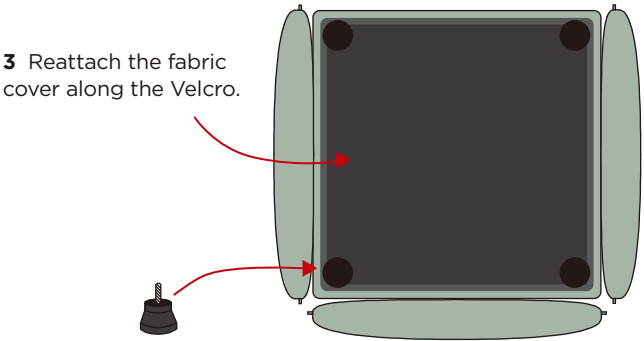

3 Reattach the fabric cover along the Velcro.



4 Attach the sofa legs to the pre-drilled holes at the bottom of the base.

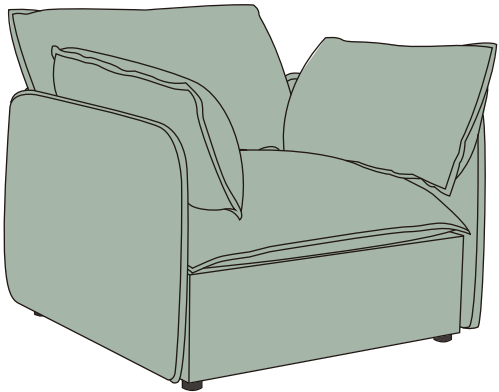


Assembly Instructions


⚠ Notice : Accessories are stored in a pocket with the sofa.

⚠ Notice : Secure all bolts, screws, and nuts before use. Recheck every 90 days. Do not overtighten.


acanova®
SKU: AZY939

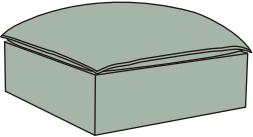Parts List		
	Seat Cushion	x1
	Leg	x4
	T-shaped Leg	x2
B 	Flat Washer	x4
D 	M6*35	x4
E 	Allen Wrench (4mm)	x1

1. Assemble the Ottoman Seat

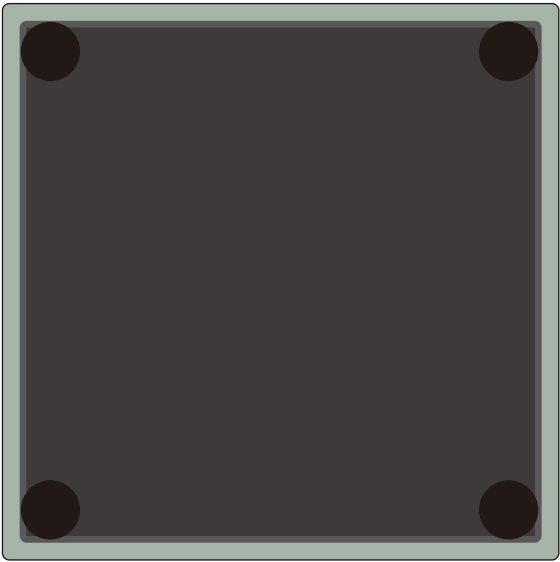

1.1 Attach the legs to the pre-drilled holes on the bottom of the seat base.

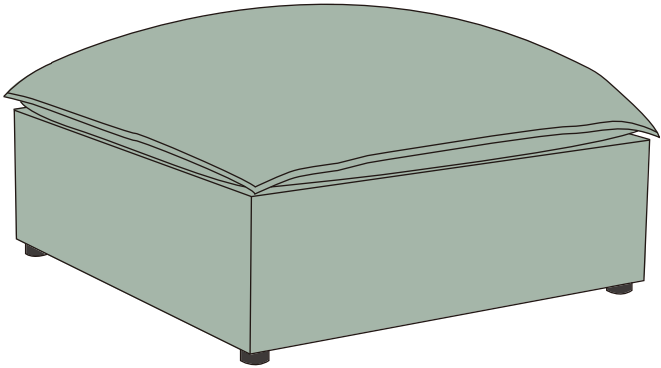

Assembly Instructions

⚠ **Notice :** Accessories are stored in a pocket with the sofa.


⚠ **Notice :** Secure all bolts, screws, and nuts before use. Recheck every 90 days. Do not overtighten.

acanova®



SKU: AZY939

2. Assembly of Multi-piece Configuration

Schematic Diagram of Multi-piece Assembly

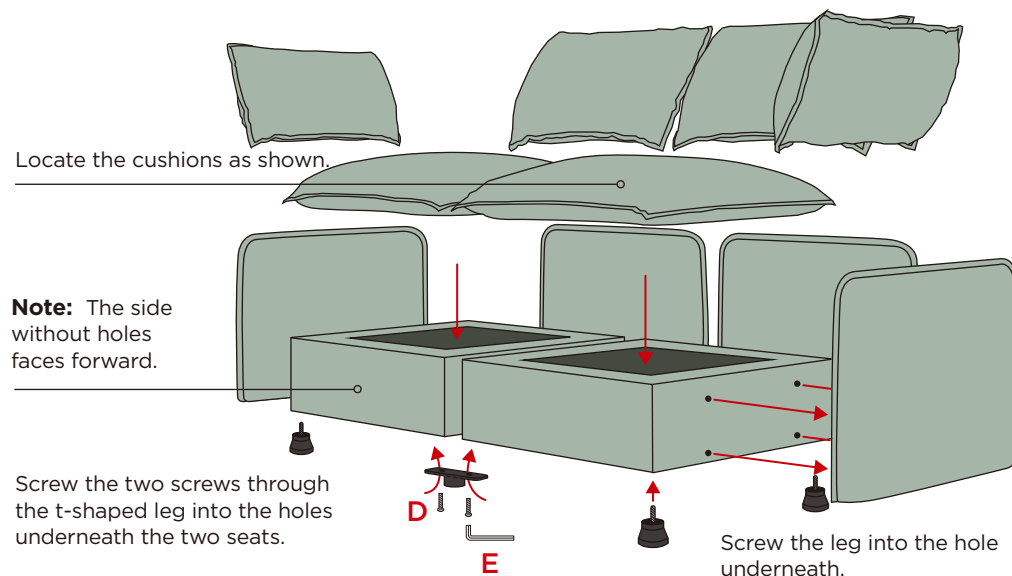

Schematic Diagram of Bottom Metal Legs Installation

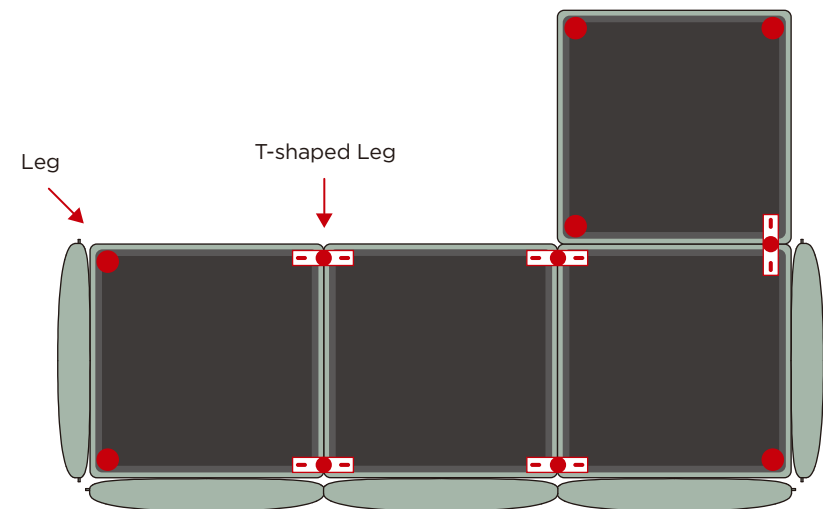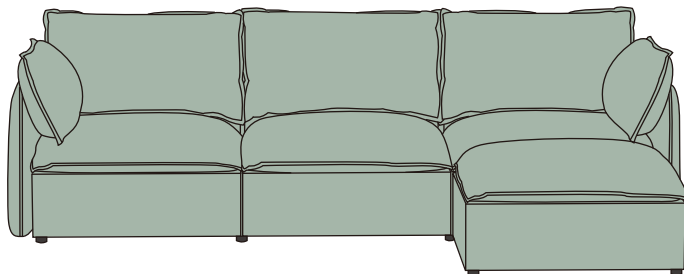

Freely configure the sofa according to this manual.
Additional combinations can also be created as needed.