


Assembly instructions


acanova®


SKU: AZH608

① **Notice :** Firmly secure all bolts, screws, and nuts before use , and recheck them every 90 days. Do not overtighten the screws.


part name/Qty	
 A	x1
 B 40mm	x4
 C 60mm	x2
 D	x6
 E	x6
 F	x4

Place the back cushion and seat.cushion onto the sofa frame.

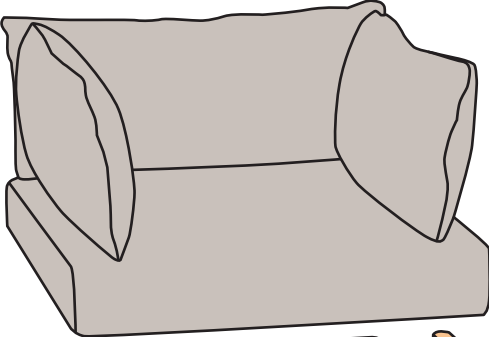

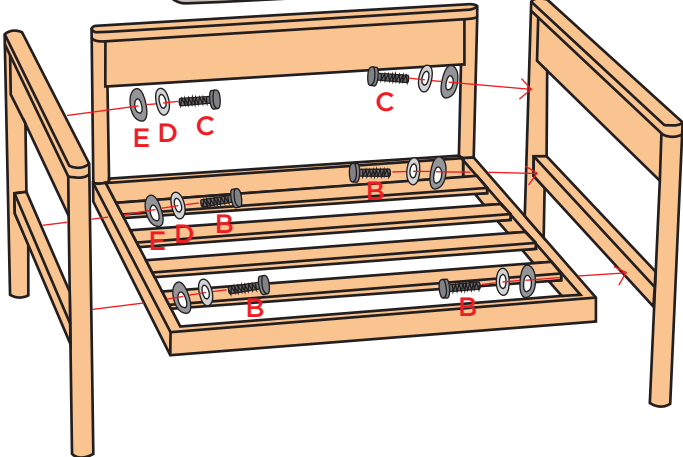

Attach the armrests to the sofa frame by inserting the bolts through the holes in the frame, then securing them into the armrest ends.

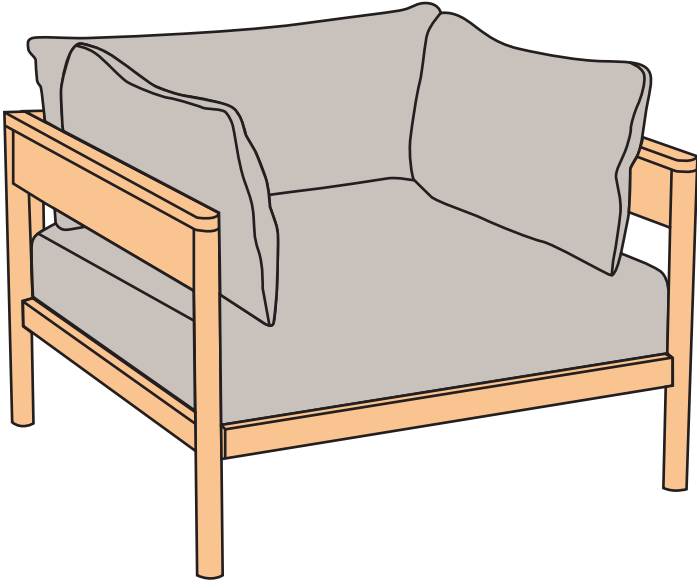




Installation complete

① **Notice :** The F-pad is a self-adhesive spacer. If the floor is uneven, attach it to the bottom of the sofa legs after ensuring they are dust-free


Assembly instructions

acanova®



SKU: AZH608

part name/Qty		
	A	x1
	B	x4
	C	x2
	D	x2
	E	x2
	F	x1
	G	x10
	H	x10
	I	x1
	J	x1
	K	x1
	L	x7


① **Notice** : Firmly secure all bolts, screws, and nuts before use, and recheck them every 90 days. Do not overtighten the screws.

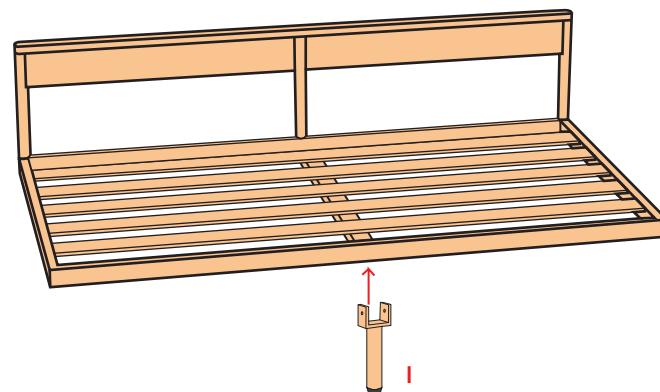

Insert the screws through the sofa legs and frame holes, then tighten the nuts to securely fasten them.

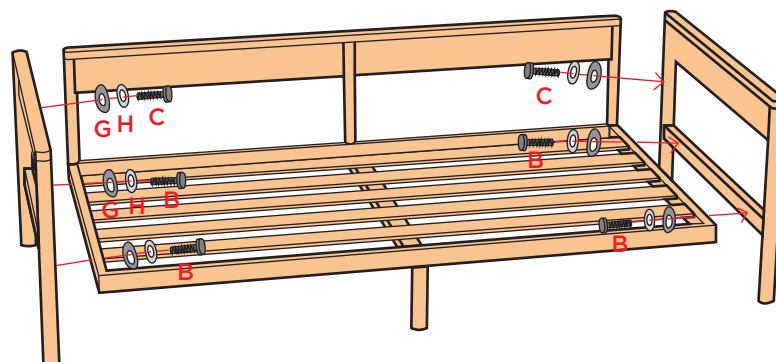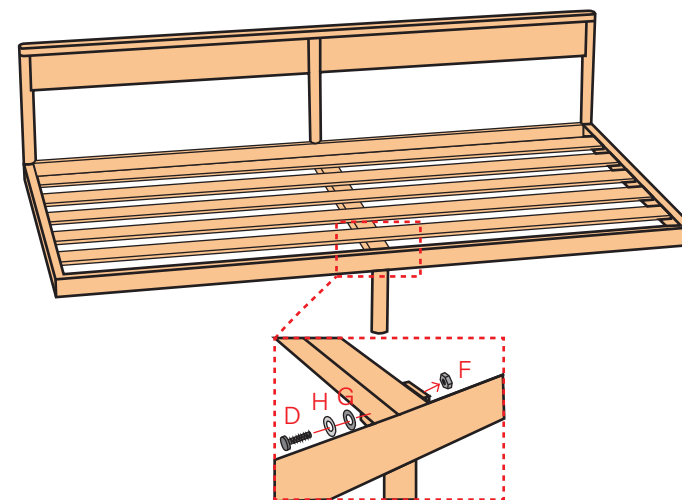

Attach the arrests to the sofa frame by inserting the bolts through the holes in the frame, then securing them into the armrest ends.

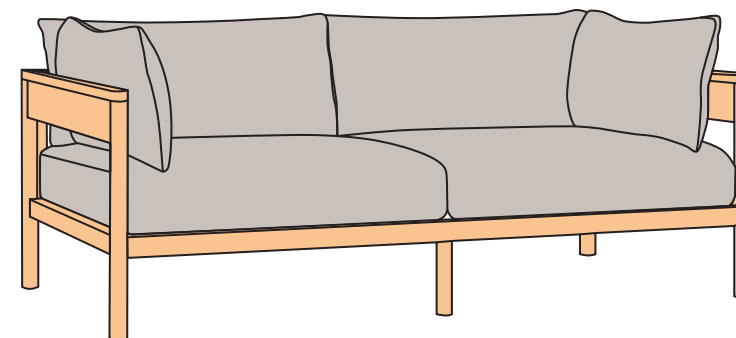

Place the back cushions and seat cushions onto the sofa frame. Installation complete




① **Notice** : Extra parts are used for kit assembly.

① **Notice** : The L-pad is a self-adhesive spacer. If the floor is uneven, attach it to the bottom of the sofa legs after ensuring they are dust-free. You can also adjust the height by rotating the black foot pad at the center leg.

Assembly instructions


acanova®

SKU: AZH608


part name/Qty		
	A	x1
	B	x6
	C	x3
	D	x2
	E	x4
	F	x2
	G	x15
	H	x15
	I	x2
	J	x1
	K	x2
	L	x10

① **Notice** : Firmly secure all bolts, screws, and nuts before use, and recheck them every 90 days. Do not overtighten the screws.


Attach the armrests to the sofa frame by inserting the bolts through the holes in the frame, then securing them into the armrest ends.

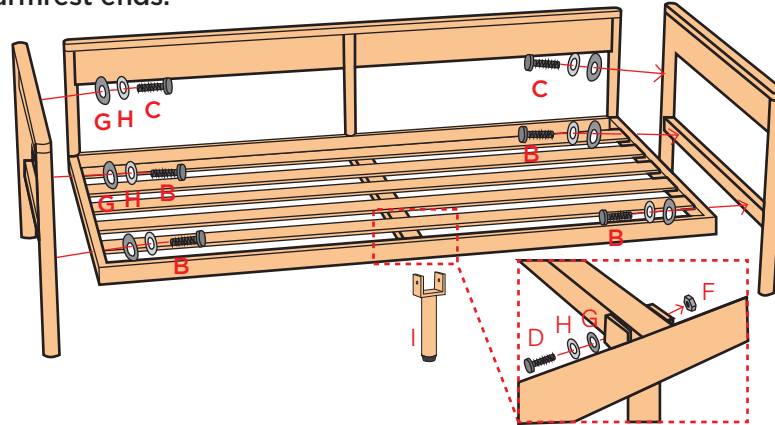

Insert the screws through the sofa legs and frame holes, then tighten the nuts to securely fasten them.

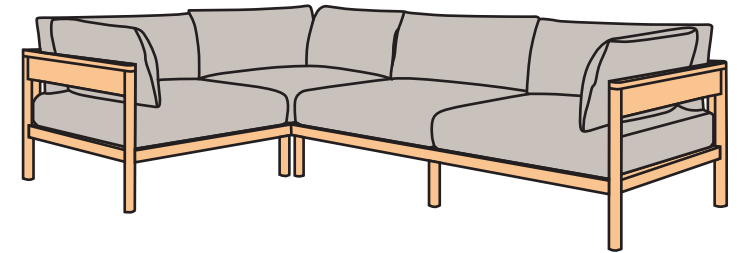

Place the back cushions and seat cushions onto the sofa frame.

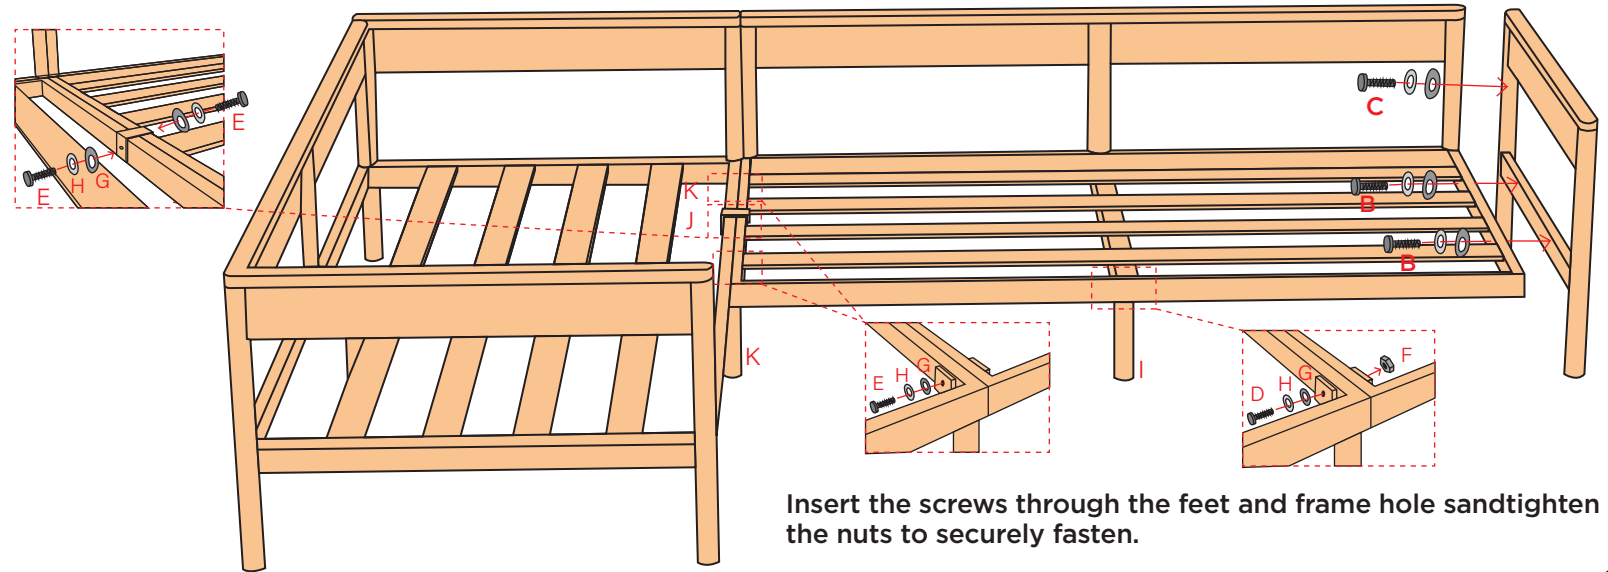

Insert the screws through the feet and frame hole sandtighten the nuts to securely fasten.

① **Notice** : The L-pad is a self-adhesive spacer. If the floor is uneven, attach it to the bottom of the sofa legs after ensuring they are dust-free. You can also adjust the height by rotating the black foot pad at the center leg.


Assembly instructions

acanova®

SKU: AZH608


Notice: Firmly secure all bolts, screws, and nuts before use, and recheck them every 90 days. Do not overtighten the screws.

Part name/Qty		
	A	x1
	B	x4
	C	x2
	D	x4
	E	x2
	F	x1
	G	x4
	H	x10
	I	x11
	J	x1
	K	x3
		x1
	L	x2

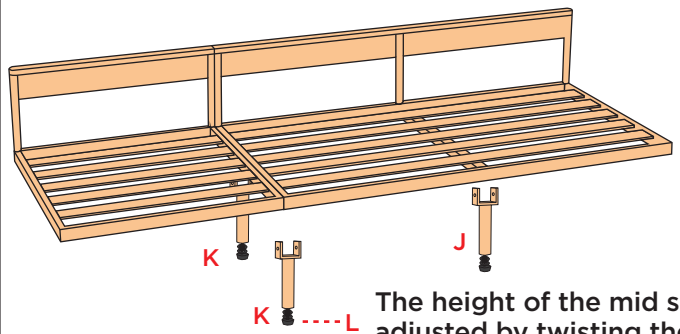


The height of the mid sofa legs can be adjusted by twisting the black pads at the bottom. Adjust as needed to reach the desired height.


Join the two sofa frames together, then insert the sofa legs.

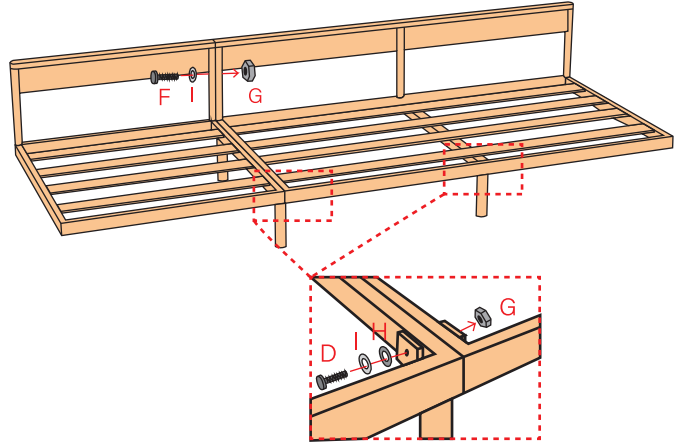

Insert the screws through the sofa legs and frame holes, then tighten the nuts to securely fasten them.

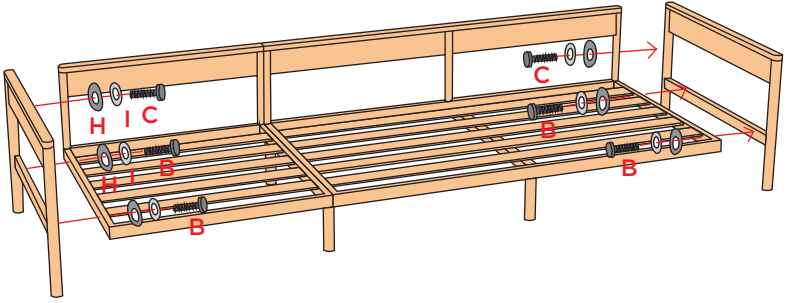

Attach the armrests to the sofa frame by inserting the bolts through the holes in the frame, then securing them into the armrest ends.

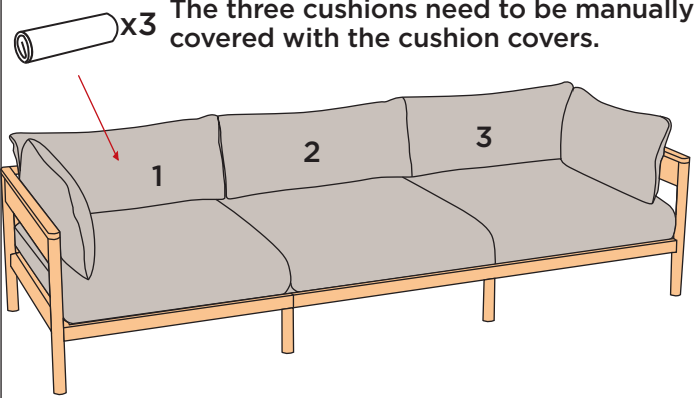

The three cushions need to be manually covered with the cushion covers.


Place the back cushions and seat cushions onto the sofa frame.

Notice: Extra parts are used for kit assembly.

Assembly instructions


acanva®

SKU: AZH608


Part name/Qty		
	A	x1
	B	x6
	C	x3
	D	x4
	E	x4
	F	x1
	G	x5
	H	x17
	I	x18
	J	x2
	K	x1
	L	x4
		x1
	M	x2

① Notice : Firmly secure all bolts, screws, and nuts before use, and recheck them every 90 days. Do not overtighten the screws.



Attach the armrests to the sofa frame by inserting the bolts through the holes in the frame, then securing them into the armrest ends.

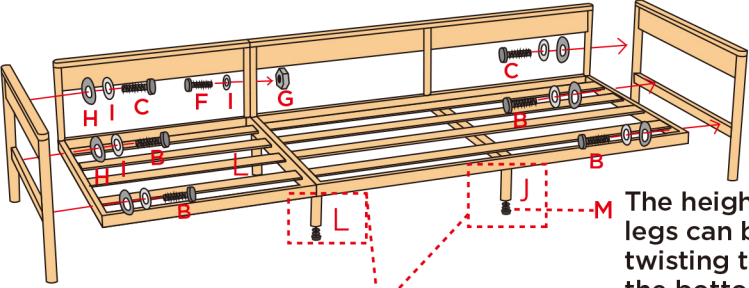

The height of the mid sofa legs can be adjusted by twisting the black pads at the bottom. Adjust as needed to reach the desired height.

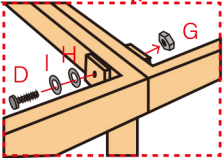

Insert the screws through the sofa legs and frame holes, then tighten the nuts to securely fasten them.

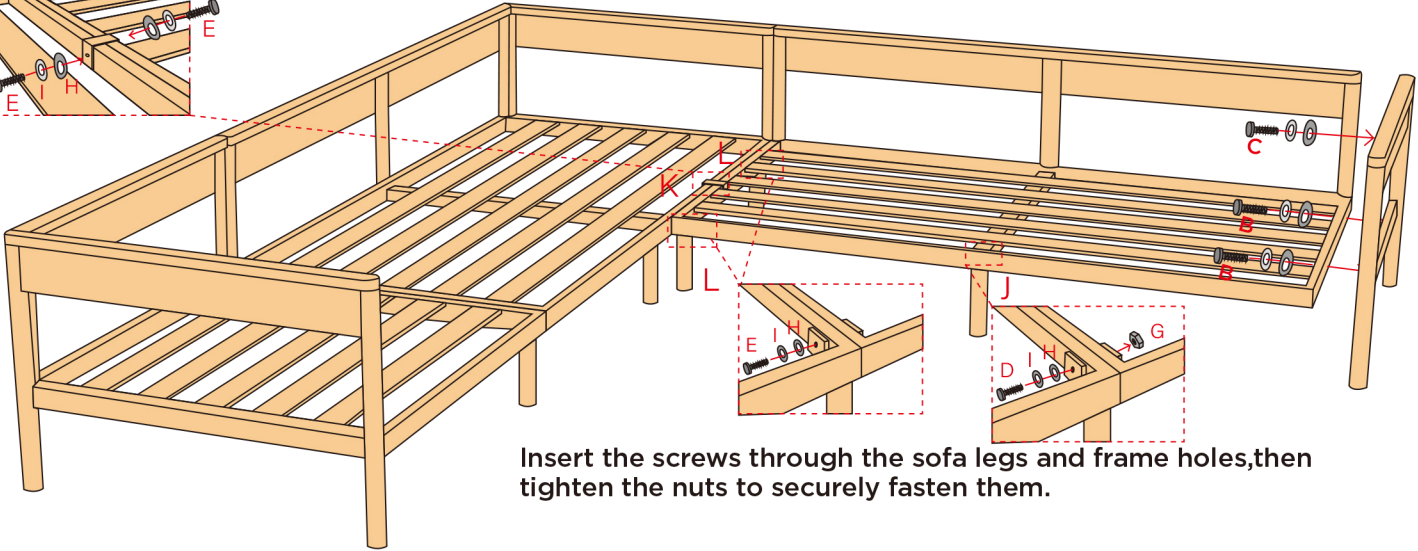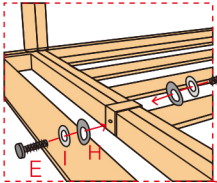


Attach the armrests to the sofa frame by screwing the bolt through the holes in the frame into the armrest ends.



x3 The three cushions need to be manually covered with the cushion covers.



Please use professional tools to unpack the seat package

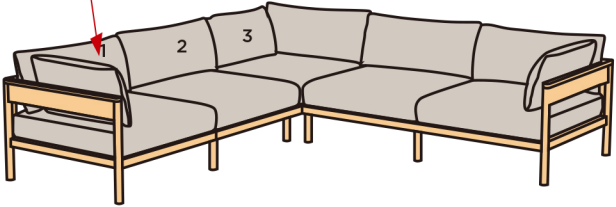

Place the back cushions and seat cushions onto the sofa frame. Installation complete